

RedLab 1408FS

Eight Analog Inputs, Two Analog Outputs, and 16 Digital I/O
Full-speed USB 2.0 device

User's Guide



RedLab 1408FS

USB-based Analog and Digital I/O Module

User's Guide



Document Revision 1.3 E, April, 2014
© Copyright 2014, Meilhaus Electronic

Imprint

User's Guide RedLab® Series

Document Revision 1.3 E
Revision Date: April 2014

Meilhaus Electronic GmbH

Am Sonnenlicht 2
D-82239 Alling near Munich, Germany
<http://www.meilhaus.de>

© Copyright 2014 Meilhaus Electronic GmbH

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Meilhaus Electronic GmbH.

Important note:

All the information included in this user's guide were put together with utmost care and to best knowledge. However, mistakes may not have been erased completely.

For this reason, the firm Meilhaus Electronic GmbH feels obliged to point out that they cannot be take on neither any warranty (apart from the claims for warranty as agreed) nor legal responsibility or liability for consequences caused by incorrect instructions.

We would appreciate it if you inform us about any possible mistakes.

The trademark Personal Measurement Device, TracerDAQ, Universal Library, InstaCal, Harsh Environment Warranty, Measurement Computing Corporation, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation.

Windows, Microsoft, and Visual Studio are either trademarks or registered trademarks of Microsoft Corporation.

LabVIEW is a trademark of National Instruments.

CompactFlash is a registered trademark of SanDisk Corporation.

XBee is a trademark of MaxStream, Inc.

All other trademarks are the property of their respective owners.

Table of Contents

Preface

About this User's Guide	6
What you will learn from this user's guide	6
Conventions in this user's guide	6
Where to find more information	6

Chapter 1

Introducing the RedLab 1408FS	7
RedLab 1408FS block diagram	8
Software features	8
Connecting a RedLab 1408FS to your computer is easy	9

Chapter 2

Installing the RedLab 1408FS	10
What comes with your RedLab 1408FS shipment?	10
Hardware	10
Additional documentation	10
Unpacking the RedLab 1408FS	11
Installing the software	11
Installing the hardware	11
Calibrating the RedLab 1408FS	12

Chapter 3

Functional Details	13
Theory of operation - analog input acquisition modes	13
Software paced mode	13
Continuous scan mode	13
External components	13
USB connector	14
LED	14
Screw terminal wiring	14
Main connector and pin out	15
Analog input terminals (CH0 IN - CH7 IN)	16
Analog output terminals (D/A OUT 0 and D/A OUT 1)	19
Digital I/O terminals (Port A0 to A7, and Port B0 to B7)	19
Power terminals	20
External trigger terminal	20
Counter terminal	20
+2.5VREF terminal	21
SYNC terminal	21
Ground terminals	21
Accuracy	21
RedLab 1408FS channel gain queue feature	24
Synchronizing multiple units	24

Chapter 4

Specifications	26
Analog input	26
Analog output	27
Digital input/output	28
External trigger	28
External clock input/output	29
Counter section	29

Non-volatile memory.....	29
Microcontroller.....	30
Power.....	30
General	30
Environmental	30
Mechanical	31
Main connector and pin out.....	31
4-channel differential mode	31
8-channel single-ended mode.....	31

About this User's Guide

What you will learn from this user's guide

This user's guide explains how to install, configure, and use the RedLab 1408FS, and refers you to related documents available on our web site, and to technical support resources.

Conventions in this user's guide

For more information on ...

Text presented in a box signifies additional information and helpful hints related to the subject matter you are reading.

Caution! Shaded caution statements present information to help you avoid injuring yourself and others, damaging your hardware, or losing your data.

<#:#> Angle brackets that enclose numbers separated by a colon signify a range of numbers, such as those assigned to registers, bit settings, etc.

bold text **Bold** text is used for the names of objects on the screen, such as buttons, text boxes, and check boxes. For example:
1. Insert the disk or CD and click the **OK** button.

italic text *Italic* text is used for the names of manuals and help topic titles, and to emphasize a word or phrase. For example:
The *InstaCal* installation procedure is explained in the *Quick Start Guide*.
Never touch the exposed pins or circuit connections on the board.

Where to find more information

The following electronic documents provide helpful information relevant to the operation of the RedLab 1408FS.

- The *Quick Start Guide* is available on our RedLab CD in the root directory.
- The *Guide to Signal Connections* is available on our RedLab CD under „ICaUL\Documents“.
- The *Universal Library User's Guide* is available on our RedLab CD under „ICaUL\Documents“.
- The *Universal Library Function Reference* is available on our RedLab CD under „ICaUL\Documents“.
- The *Universal Library for LabVIEW™ User's Guide* is available on our RedLab CD under „ICaUL\Documents“.

Introducing the RedLab 1408FS

This user's guide contains all of the information you need to connect the RedLab 1408FS to your computer and to the signals you want to measure.

The RedLab 1408FS is a USB 2.0 full-speed, device that is supported under popular Microsoft® Windows® operating systems. The RedLab 1408FS is fully compatible with both USB 1.1 and USB 2.0 ports.

The RedLab 1408FS features eight analog inputs, two 12-bit analog outputs, 16 digital I/O connections, and one 32-bit external event counter.

The analog inputs are software configurable for either eight 13-bit single-ended inputs or four 14-bit differential inputs. The 16 digital I/O lines are independently selectable as input or output in two 8-bit ports. The 32-bit counter can count TTL pulses. A SYNC (synchronization) input/output line allows you to pace the analog input acquisition of one USB module from the clock output of another.

The RedLab 1408FS is powered by the +5 volt USB supply from your computer. No external power is required.

The RedLab 1408FS is shown in Figure 1. I/O connections are made to the screw terminals located along each side of the RedLab 1408FS.



Figure 1. RedLab 1408FS

RedLab 1408FS block diagram

RedLab 1408FS functions are illustrated in the block diagram shown here.

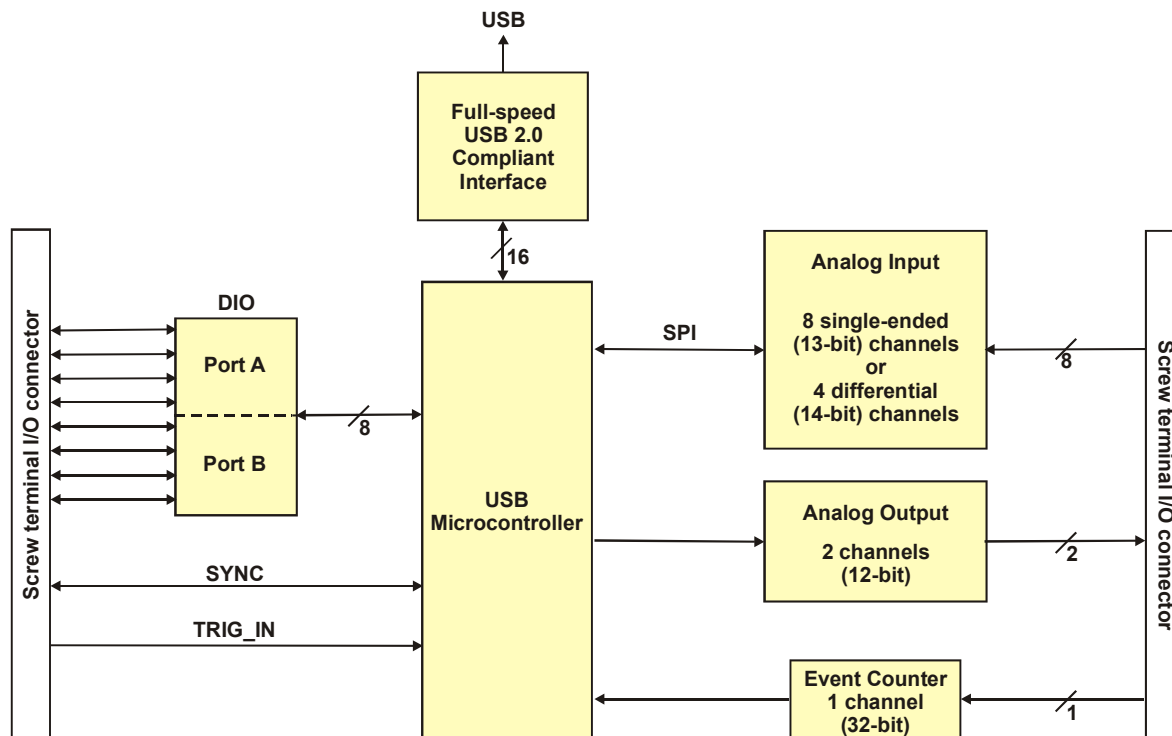


Figure 2. RedLab 1408FS functional block diagram

Software features

For information on the features of *InstaCal* and the other software included with your *RedLab 1408FS*, refer to the *Quick Start Guide* that shipped with your device. The *Quick Start Guide* is also available in PDF on our RedLab CD (root directory).

Connecting a RedLab 1408FS to your computer is easy

Installing a data acquisition device has never been easier.

- The RedLab 1408FS relies upon the Microsoft Human Interface Device (HID) class drivers. The HID class drivers ship with every copy of Windows that is designed to work with USB ports. We use the Microsoft HID because it is a standard, and its performance delivers full control and maximizes data transfer rates for your RedLab 1408FS. No third-party device driver is required.
- The RedLab 1408FS is plug-and-play. There are no jumpers to position, DIP switches to set, or interrupts to configure.
- You can connect the RedLab 1408FS before or after you install the software, and without powering down your computer first. When you connect an HID to your system, your computer automatically detects it and configures the necessary software. You can connect and power multiple HID peripherals to your system using a USB hub.
- You can connect your system to various devices using a standard four-wire cable. The USB connector replaces the serial and parallel port connectors with one standardized plug and port combination.
- You do not need a separate power supply module. The USB automatically delivers the electrical power required by each peripheral connected to your system.
- Data can flow two ways between a computer and peripheral over USB connections.

Installing the RedLab 1408FS

What comes with your RedLab 1408FS shipment?

As you unpack your RedLab 1408FS, verify that the following components are included.

Hardware

- RedLab 1408FS (shown with cable)



- USB cable (2 meter length)



Additional documentation

In addition to this hardware user's guide, you should also receive the *Quick Start Guide* (available on our RedLab CD (root directory)). This booklet supplies a brief description of the software you received with your RedLab 1408FS and information regarding installation of that software. Please read this booklet completely before installing any software or hardware.

Unpacking the RedLab 1408FS

As with any electronic device, you should take care while handling to avoid damage from static electricity. Before removing the RedLab 1408FS from its packaging, ground yourself using a wrist strap or by simply touching the computer chassis or other grounded object to eliminate any stored static charge.

If your RedLab 1408FS is damaged, notify Meilhaus Electronic immediately by phone, fax, or e-mail. For international customers, contact your local distributor where you purchased the RedLab 1408FS.

- Phone: +49 (0) 8141/5271-188
- Fax: +49 (0) 8141/5271-169
- E-Mail: support@meilhaus.com

Installing the software

Refer to the *Quick Start Guide* for instructions on installing the software *Guide* (available on our RedLab CD (root directory)).


Installing the hardware

Be sure you are using the latest system software

Before you install your RedLab 1408FS, run Windows Update to update your operating system with the latest HID and USB drivers.

To connect the RedLab 1408FS to your system, turn your computer on, and connect the USB cable to a USB port on your computer or to an external USB hub that is connected to your computer. The USB cable provides power and communication to the RedLab 1408FS.

When you connect the RedLab 1408FS for the first time, a series of **Found New Hardware** popup balloons (Windows XP) or dialogs (other Windows versions) open as the RedLab 1408FS is detected by your computer.

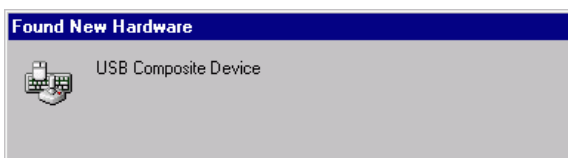

It is normal for multiple dialogs to open when you connect the RedLab 1408FS for the first time. For additional information, refer to the "Notes on installing and using the RedLab 1408FS" that was shipped with the RedLab 1408FS.

The last popup balloon or dialog states "Your new hardware is installed and ready to use," and the LED on the RedLab 1408FS should flash and then remain lit. This indicates that communication is established between the RedLab 1408FS and your computer.



You can install up to two RedLab 1408FS units on most computers. If you need to connect more than two RedLab 1408FS units to your computer, contact Tech Support (Phone: +49-(0)8141/5271-188, Fax: +49-(0)8141/5271-169 or E-Mail: support@meilhaus.com).

Caution! Do not disconnect **any** device from the USB bus while the computer is communicating with the RedLab 1408FS, or you may lose data and/or your ability to communicate with the RedLab 1408FS.

If the LED turns off

If the LED is illuminated but then turns off, the computer has lost communication with the RedLab 1408FS. To restore communication, disconnect the USB cable from the computer, and then reconnect it. This should restore communication, and the LED should turn back *on*.

Allow the RedLab 1408FS to operate for at least 30 minutes before using the device. This warm up time is required to achieve the specified rated accuracy of measurements.

Calibrating the RedLab 1408FS

The RedLab 1408FS is shipped fully calibrated. Calibration coefficients are stored in EEPROM. Return the device to Meilhaus Electronic when calibration is required. The normal calibration interval is once per year.

Functional Details

Theory of operation - analog input acquisition modes

The RedLab 1408FS can acquire analog input data in two different modes – software paced and continuous scan.

Software paced mode

In software paced mode, you can acquire one analog sample at a time. You initiate the A/D conversion by calling a software command. The analog value is converted to digital and returned to the computer. You can repeat this procedure until you have the total number of samples that you want from one channel.

The maximum throughput sample rate in software paced mode is system-dependent.

Continuous scan mode

In continuous scan mode, you can acquire data from up to eight channels. The analog data is continuously acquired and converted to digital values until you stop the scan. Data is transferred in blocks of 31 samples from the RedLab 1408FS to the memory buffer on your computer.

The maximum continuous scan rate of 48 kS/s is an aggregate rate. The total acquisition rate for all channels cannot exceed 48 kS/s. You can acquire data from one channel at 48 kS/s, two channels at 24 kS/s, and four channels at 12 kS/s. You can start a continuous scan with either a software command or with an external hardware trigger event.

External components

The RedLab 1408FS has the following external components, as shown in Figure 3.

- USB connector
- LED
- Screw terminal banks (2)

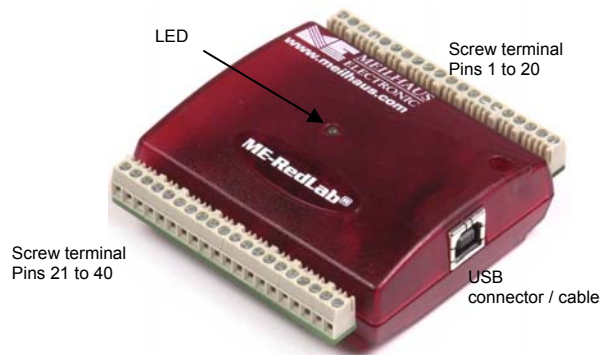


Figure 3. RedLab 1408FS external components

USB connector

The USB connector is on the right side of the RedLab 1408FS. This connector provides +5 V power and communication. The voltage supplied through the USB connector is system-dependent, and may be less than 5 V. No external power supply is required.

LED

The LED on the front of the housing indicates the communication status of the RedLab 1408FS. It uses up to 5 mA of current and cannot be disabled. The table below defines the function of the RedLab 1408FS LED.

LED Illumination

LED Illumination	Indication
Steady green	The RedLab 1408FS is connected to a computer or external USB hub.
Blinks continuously	Data is being transferred.

Screw terminal wiring

The RedLab 1408FS has two rows of screw terminals—one row on the top edge of the housing, and one row on the bottom edge. Each row has 20 connections. Pin numbers are identified in Figure 4.



Figure 4. RedLab 1408FS Screw terminal pin numbers

Screw terminal – pins 1-20

The screw terminals on the top edge of the RedLab 1408FS (pins 1 to 20) provide the following connections:

- Eight analog input connections (**CH0 IN** to **CH7 IN**)
- Two analog output connections (**D/A OUT 0** to **D/A OUT 1**)
- One external trigger source (**TRIG_IN**)
- One SYNC terminal for external clocking and multi-unit synchronization (**SYNC**)
- One voltage output source (**2.5VREF**)
- Five analog ground connections (**AGND**)

- One ground connection (**GND**)
- One external event counter connection (**CTR**)


Screw terminal – pins 21-40

The screw terminals on the bottom edge of the (pins 21 to 40) provide the following connections:


- 16 digital I/O connections (**PortA0** to **Port A7**, and **Port B0** to **Port B7**)
- One power connection (**PC+5 V**)
- Three ground connections (**GND**)

Main connector and pin out

Connector type	Screw terminal
Wire gauge range	16 AWG to 30 AWG

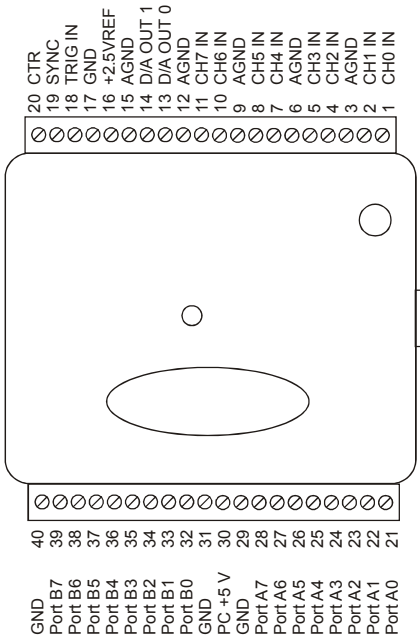

8-channel single-ended mode pin out

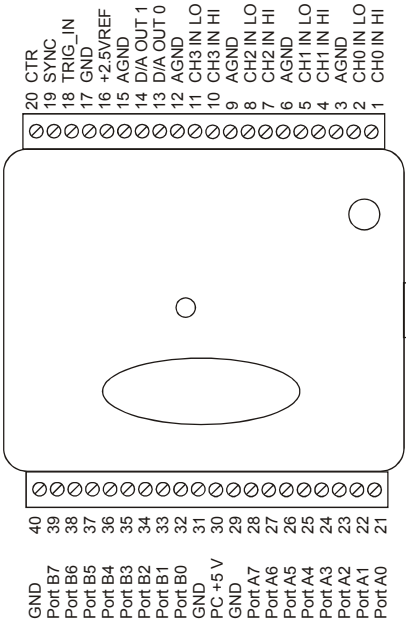

4-channel differential mode pin out

Analog input terminals (CH0 IN - CH7 IN)

You can connect up to eight analog input connections to the screw terminal containing pins 1 to 20 (**CH0 IN** through **CH7 IN**.) Refer to the "[Main connector and pin out](#)" diagrams on page 15 for the location of these pins.

You can configure the analog input channels as eight single-ended channels or four differential channels. When configured for differential mode, each analog input has 14-bit resolution. When configured for single-ended mode, each analog input has 13-bit resolution, due to restrictions imposed by the A/D converter.

Single-ended configuration

When all of the analog input channels are configured for single-ended input mode, eight analog channels are available. The input signal is referenced to signal ground (GND), and delivered through two wires:

- The wire carrying the signal to be measured connects to CH# IN.
- The second wire connects to AGND.

The input range for single-ended mode is ± 10 V. No other ranges are supported in this mode. Figure 5 illustrates a typical single-ended measurement connection.

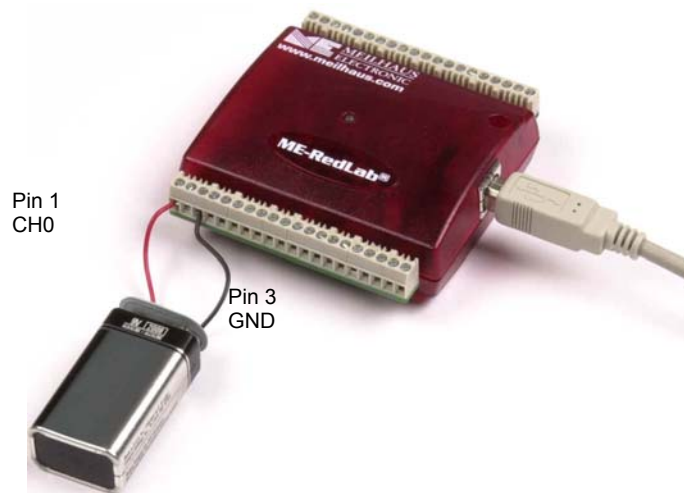


Figure 5. Single-ended measurement connection

Battery voltage should read as expected when the hardware is configured for single-ended mode.

Single-ended measurements using differential channels

To perform a single-ended measurement using differential channels, connect the signal to "CH n IN HI" input, and ground the associated "CH n IN LO" input.

Differential configuration

When all of the analog input channels are configured for differential input mode, four analog channels are available. In differential mode, the input signal is measured with respect to the low input.

The input signal is delivered through three wires:

- The wire carrying the signal to be measured connects to CH0 IN HI, CH1 IN HI, CH2 IN HI, or CH3 IN HI.
- The wire carrying the reference signal connects to CH0 IN LO, CH1 IN LO, CH2 IN LO, or CH3 IN LO.
- The third wire connects to GND.

A low-noise precision programmable gain amplifier (PGA) is available on differential channels to provide gains of up to 20 and a dynamic range of up to 14-bits. Differential mode input voltage ranges are ± 20 V, ± 10 V, ± 5 V, ± 4 V, ± 2.5 V, ± 2.0 V, ± 1.25 V, and ± 1.0 V.

In differential mode, the following two requirements must be met for linear operation:

- Any analog input must remain in the -10 V to $+20$ V range with respect to ground at all times.
- The maximum differential voltage on any given analog input pair must remain within the selected voltage range.

The input [*common-mode voltage* + *signal*] of the differential channel must be in the -10 V to $+20$ V range in order to yield a useful result. For example, you input a 4 V pp sine wave to CHHI, and apply the same sine wave 180° out of phase to CHLO. The common mode voltage is 0 V. The differential input voltage swings from 4 V – $(-4$ V) = 8 V to $(-4$ V) – 4 V = -8 V. Both inputs satisfy the -10 V to $+20$ V input range requirement, and the differential voltage is suited for the ± 10 V input range (see Figure 6).

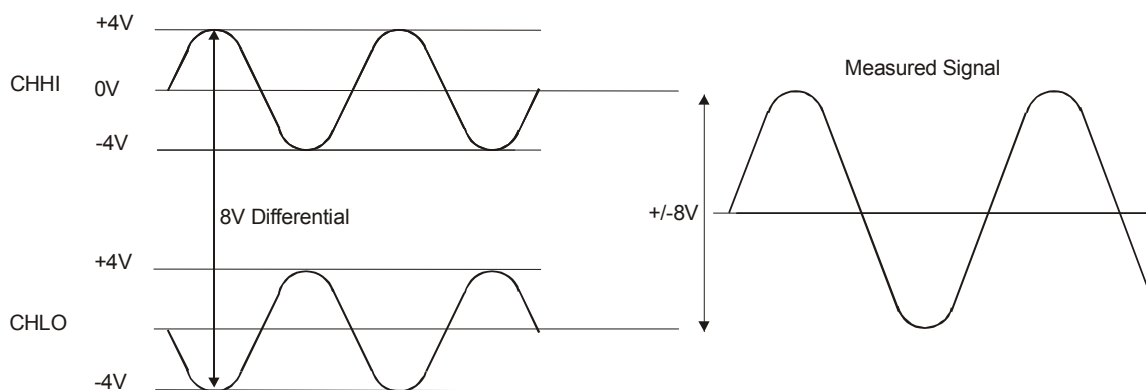


Figure 6. Differential voltage example: common mode voltage of 0 V

If you increase the common mode voltage to 11 V, the differential remains at ± 8 V. Although the [*common-mode voltage* + *signal*] on each input now has a range of $+7$ V to $+15$ V, both inputs still satisfy the -10 V to $+20$ V input requirement (see Figure 7).

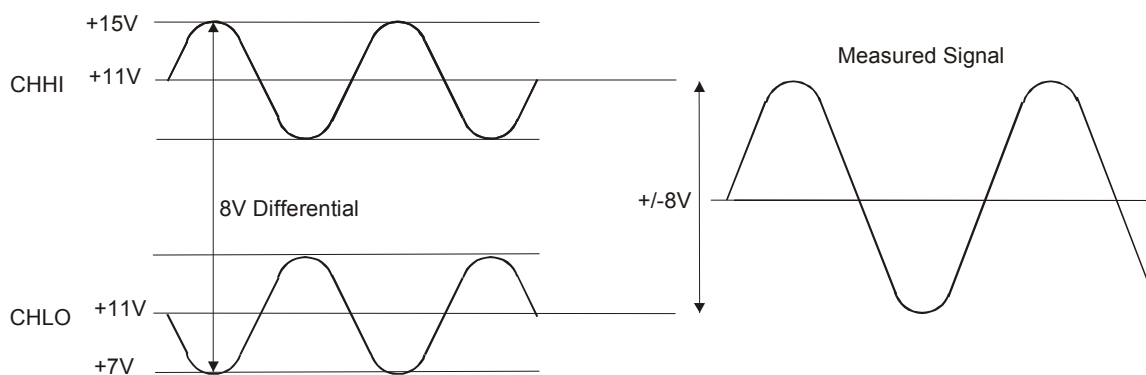


Figure 7. Differential voltage example: common mode voltage of 11 V

If you decrease the common-mode voltage to -7 V , the differential stays at $\pm 8\text{ V}$. However, the solution now violates the input range condition of -10 V to $+20\text{ V}$. The voltage on each analog input now swings from -3 V to -11 V . Voltages between -10 V and -3 V are resolved, but those below -10 V are clipped (see Figure 8).

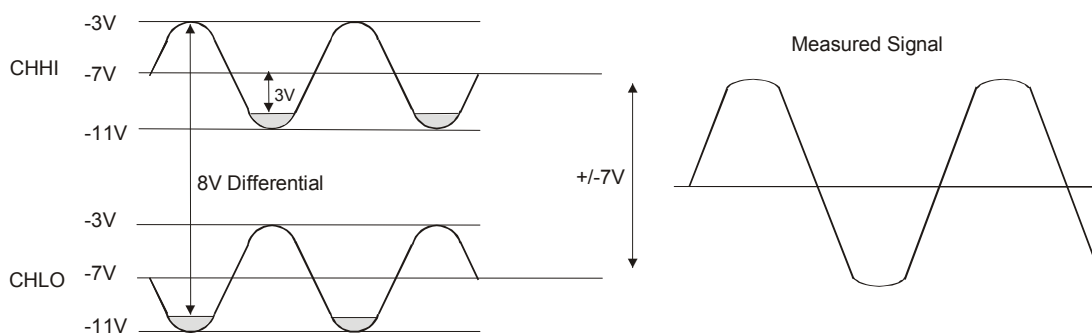


Figure 8. Differential voltage example: common mode voltage of -7 V

Since the analog inputs are restricted to a -10 V to $+20\text{ V}$ signal swing with respect to ground, all ranges *except* $\pm 20\text{ V}$ can realize a linear output for any differential signal with zero common mode voltage and full scale signal inputs. The $\pm 20\text{ V}$ range is the exception. You cannot put -20 V on CHHI and 0 V on CHLO since this violates the input range criteria. The following table shows some possible inputs and the expected results.

Sample inputs and differential results

CHHI	CHLO	Result
-20 V	0 V	In Valid
-15 V	$+5\text{ V}$	In Valid
-10 V	0 V	-10 V
-10 V	$+10\text{ V}$	-20 V
0 V	$+10\text{ V}$	-10 V
0 V	$+20\text{ V}$	-20 V
$+10\text{ V}$	-10 V	$+20\text{ V}$
$+10\text{ V}$	0 V	$+10\text{ V}$
$+15\text{ V}$	-5 V	$+20\text{ V}$
$+20\text{ V}$	0	$+20\text{ V}$

For more information on analog signal connections

For more information on single-ended and differential inputs, refer to the *Guide to Signal Connections* (this document is available on our RedLab CD under „ICaLUL\Documents“.)

Analog output terminals (D/A OUT 0 and D/A OUT 1)

You can connect up to two analog output connections to the screw terminal pins 13 and 14 (**D/A OUT 0** and **D/A OUT 1**). Refer to the "[Main connector and pin out](#)" diagrams on page 15 for the location of these pins.

Each channel can be paced individually at rates up to 10,000 updates per second. Both channels can be paced simultaneously using the same time base at 5000 updates per channel. The 0-4.096 V output range provides a convenient 1 mV per LSB when setting the output voltage levels.

Digital I/O terminals (Port A0 to A7, and Port B0 to B7)

You can connect up to 16 digital I/O lines to the screw terminal containing pins 21 to 40 (**Port A0** to **Port A7**, and **Port B0** to **Port B7**.) Refer to the "[Main connector and pin out](#)" diagrams on page 15 for the location of these pins. You can configure each digital port for either input or output.

When you configure the digital bits for input, you can use the digital I/O terminals to detect the state of any TTL level input. Refer to the switch shown in Figure 9 and the schematic shown in Figure 10. If the switch is set to the +5 V input, Port A0 reads *TRUE* (1). If you move the switch to GND, Port A0 reads *FALSE*.

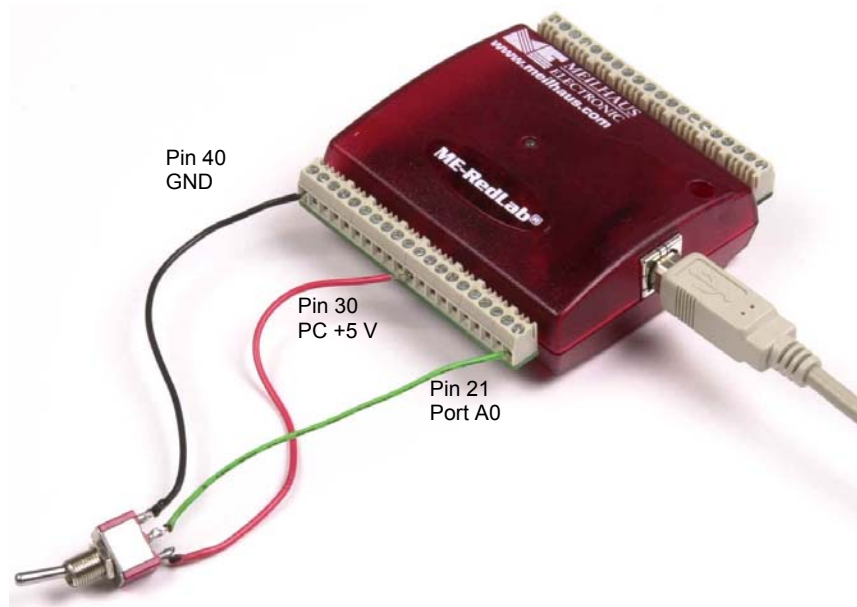


Figure 9. Digital connection Port A0 detecting the state of a switch

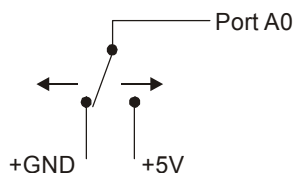


Figure 10. Schematic showing switch detection by digital channel Port A0

For more information on digital signal connections

For more information on digital signal connections and digital I/O techniques, refer to the *Guide to Signal Connections* (available on our RedLab CD under „ICaIUL\Documents“).

Power terminals

The **PC +5V** connection (pin 30) draws power from the USB connector. This terminal is a 5 V output that is supplied by the host computer. Refer to the "[Main connector and pin out](#)" diagrams on page 15 for the location of this pin.

Caution! The +5 V terminal is an output. Do not connect to an external power supply or you may damage the RedLab 1408FS and possibly the computer.

The maximum total output current that can be drawn from all RedLab 1408FS connections (power, analog and digital outputs) is 420 mA. This maximum applies to most personal computers and self-powered USB hubs. Bus-powered hubs and notebook computers may limit the maximum available output current to 100 mA.

Just connecting the RedLab 1408FS to your computer draws 80 mA of current from the USB +5 V supply. Once you start running applications with the RedLab 1408FS, each DIO bit can draw up to 2.5 mA, and each analog output can draw 15 mA. The maximum amount of +5 V current available for experimental use, over and above that required by the RedLab 1408FS, is the difference between the *total current requirement* of the USB (based on the application), and the *allowed current draw* of the PC platform (500 mA for desktop PCs and self-powered hubs, or 100 mA for bus-powered hubs and notebook computers). With all outputs at their maximum output current, you can calculate the total current requirement of the RedLab 1408FS USB +5 V supply as follows:

$$(\text{RedLab 1408FS @ 80 mA}) + (16 \text{ DIO @ 2.5 mA ea}) + (2 \text{ AO @ 15 mA ea}) = 150 \text{ mA}$$

For an application running on a PC or powered hub, the maximum available excess current is $500 \text{ mA} - 150 \text{ mA} = 350 \text{ mA}$. This number is the total maximum available current at the PC +5 V screw terminals. Measurement Computing highly recommends that you figure in a safety factor of 20% below this maximum current loading for your applications. A conservative, safe user maximum in this case would be 280 mA.

Since laptop computers typically allow up to 100 mA, the RedLab 1408FS in a fully-loaded configuration may be above that allowed by the computer. In this case, you must determine the per-pin loading in the application to ensure that the maximum loading criteria is met. The per-pin loading is calculated by simply dividing the +5 V by the load impedance of the pin in question.

External trigger terminal

The **TRIG_IN** connection (pin 18) can be configured for either rising or falling edge. Refer to the "[Main connector and pin out](#)" diagrams on page 15 for the location of this pin.

Counter terminal

The **CTR** connection (pin 20) is input to the 32-bit external event. Refer to the "[Main connector and pin out](#)" diagrams on page 15 for the location of this pin. The internal counter increments when the TTL levels transition from low to high. The counter can count frequencies of up to 1 MHz.

+2.5VREF terminal

The **+2.5VREF** connection (pin 16) is an output terminal that supplies 2.5 volts. This pin is only for calibration purposes. The calibration of the RedLab 1408FS is done using *InstaCal*. Refer to the "[Main connector and pin out](#)" diagrams on page 15 for the location of this pin.

SYNC terminal

The **SYNC** connection (pin 19) is a bidirectional I/O signal. You can use it for two purposes:

- Configure as an external clock input to externally source the A/D conversions. The SYNC terminal supports TTL-level input signals of up to 48 kHz.
- Configure as an output to synchronize with a second RedLab 1408FS and acquire data from 16 channels. For information on synchronizing multiple units, refer to page 24.

Ground terminals

The four analog ground (**AGND**) connections provide a common ground for all RedLab 1408FS input channels. Four ground (**GND**) connections provide a common ground for the **DIO**, **TRIG_IN**, **CTR**, **SYNC** and **PC +5V** connections. Refer to the "[Main connector and pin out](#)" diagrams on page 15 for the location of these pins.

Accuracy

The overall accuracy of any instrument is limited by the error components within the system. Quite often, resolution is incorrectly used to quantify the performance of a measurement product. While "14-bits" or "1 part in 16383" does indicate what can be resolved, it provides little insight into the quality of an absolute measurement. Accuracy specifications describe the actual results that can be realized with a measurement device.

There are three types of errors which affect the accuracy of a measurement system:

- offset
- gain
- nonlinearity

The primary error sources in the RedLab 1408FS are offset and gain. Nonlinearity is small in the RedLab 1408FS, and is not significant as an error source with respect to offset and gain.

Figure 11 shows an example of an ideal, error-free, RedLab 1408FS transfer function. The typical calibrated accuracy of the RedLab 1408FS is range-dependent, as explained in the "[Specifications](#)" chapter on page 26. We use a ± 10 V range here as an example of what you can expect when performing a measurement in this range.

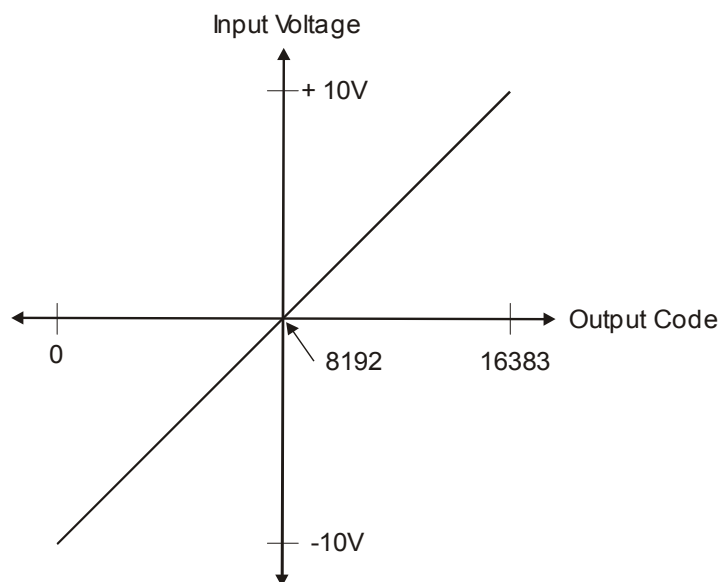


Figure 11. Ideal ADC transfer function

The offset error is measured at mid-scale. Ideally, a zero volt input should produce an output code of 8192. Any deviation from this is an offset error.

Figure 12 shows an example of a RedLab 1408FS transfer function with a ± 2.44 mV offset error. Offset error affects all codes equally by shifting the entire transfer function up or down along the input voltage axis.

The accuracy plots in Figure 12 are drawn for clarity and are not drawn to scale.

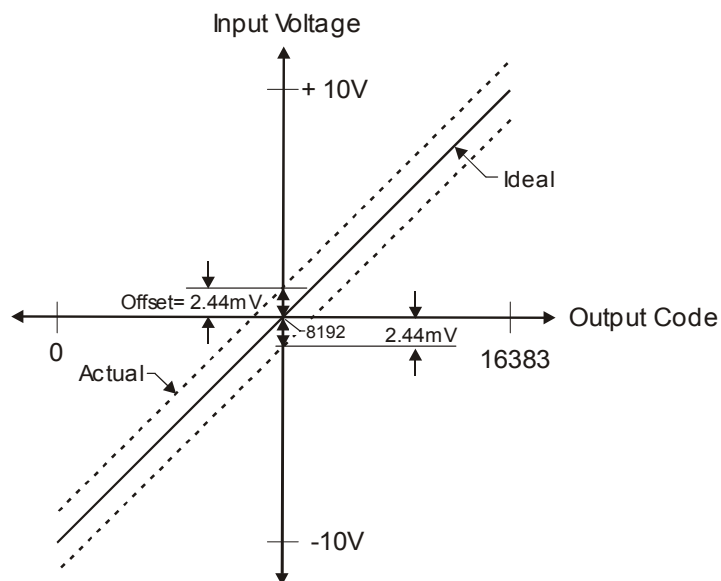


Figure 12. ADC transfer function with offset error

Gain error is a change in the slope of the transfer function from the ideal, and is typically expressed as a percentage of full-scale. Figure 13 shows the RedLab 1408FS transfer function with gain error. Gain error is easily converted to voltage by multiplying the full-scale (**FS**) input by the error.

The accuracy plots in Figure 13 are drawn for clarity and are not drawn to scale.

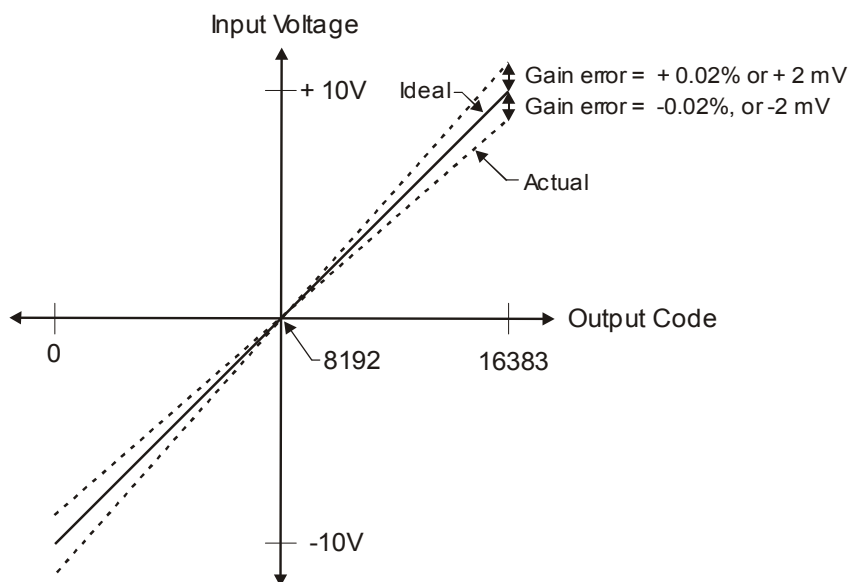


Figure 13. ADC Transfer function with gain error

Figure 13 shows an example of a RedLab 1408FS transfer function with a calibrated gain error of $\pm 0.02\%$, or ± 2 mV. This means that at full scale, neglecting the effect of offset for the moment, the measurement would be within 2 mV of the actual value. Note that gain error is expressed as a ratio. Values near \pm FS are more affected from an absolute voltage standpoint than are values near mid-scale, which see little or no voltage error.

Combining these two error sources in Figure 14, we have a plot of the error band of the RedLab 1408FS for the ± 10 V range. This is a graphical version of the typical accuracy specification of the product.

The accuracy plots in Figure 14 are drawn for clarity and are not drawn to scale

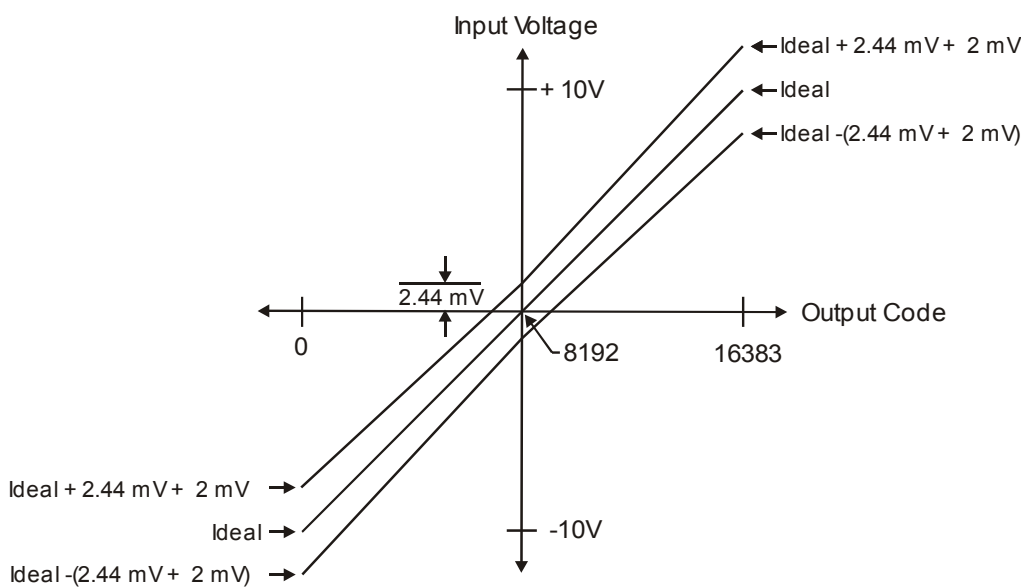


Figure 14. Error band plot


RedLab 1408FS channel gain queue feature

The RedLab 1408FS's channel gain queue feature allows you to set up a scan sequence with a unique per-channel gain setting and channel sequence.

The channel gain queue feature removes the restriction of using an ascending channel sequence at a fixed gain. This feature creates a channel list which is written to local memory on the RedLab 1408FS. Each element of the channel list is made up of a channel number and range setting. An example of a four-element list is shown in the table below.

Sample channel gain queue list

Element	Channel	Range
0	CH0	BIP10V
1	CH3	BIP5V
2	CH1	BIP10V
3	CH2	BIP1V



When a scan begins with the gain queue enabled, the RedLab 1408FS reads the first element, sets the appropriate channel number and range, and then acquires a sample. The properties of the next element are then retrieved, and another sample is acquired. This sequence continues until all elements in the gain queue have been selected. When the end of the channel list is detected, the sequence returns to the first element in the list.

This sequence repeats until the specified number of samples is gathered. You must carefully match the gain to the expected voltage range of the associated channel — otherwise, an over range condition can occur. Although this condition does not damage the RedLab 1408FS, it does produce a useless full-scale reading. It can also introduce a long recovery time from saturation, which can affect the next measurement in the queue.

Synchronizing multiple units

You can connect the SYNC pin of two RedLab 1408FS units together in a master/slave configuration and acquire data from the analog inputs of both devices using one clock.

By default, the SYNC pin (pin 19) is set for pacer output, and sends the internal pacer A/D clock signal to the screw terminal. You can use this signal as a clock input to a second USB unit by connecting it to the SYNC pin of the second USB unit.


When used as a clock input, the SYNC pin operates in one of two modes – *Continuous* or *Gated*. The mode is software-selectable using *InstaCal*.

- In the default *Continuous* mode, the RedLab 1408FS ignores the first clock pulse in order to ensure adequate setup time.
Use Continuous mode if the unit is being paced from a continuous clock source, such as a generator.
- In the *Gated* mode, it is assumed that the clock signal will be held off for an adequate amount of time for setup to occur. No clock pulses are ignored.
Use Gated mode if you want to use the RedLab 1408FS unit as a slave, and the source of the external clock is another USB unit.

To synchronize a master RedLab 1408FS with a slave RedLab 1408FS and acquire data from the analog inputs of both devices using one clock, follow the steps below.

1. Connect the SYNC pin of the master RedLab 1408FS to the SYNC pin of the slave RedLab 1408FS.
2. Run *InstaCal*.

3. From the **PC Board List** on the **InstaCal** main form, double-click on the RedLab 1408FS you want to use as a slave. The **Board Configuration** dialog opens.
4. Select *Gated* from the **Ext. Clock Type** drop-down list.

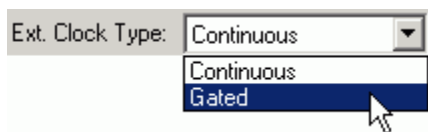

5. Set the Universal Library `EXTCLOCK` option with `cbAInScan()` / `AInScan` for the slave RedLab 1408FS to enable pacing from the master USB device.

This *InstaCal* option does not affect internally paced acquisition. It only affects scans that use the `EXTCLOCK` option.

An example of a master/slave configuration is shown here.

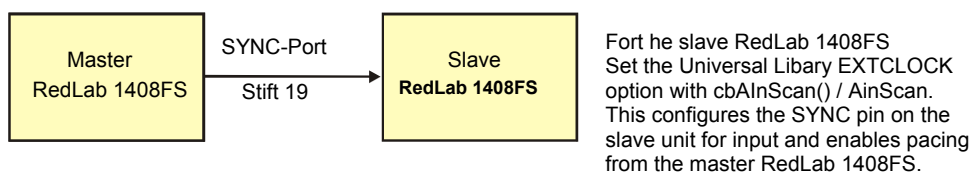


Figure 15. Configuring for synchronous data acquisition

When you are operating one RedLab 1408FS, do not set the `EXTCLOCK` option unless you are using an external clock for A/D pacing.

Specifications

Typical for 25°C unless otherwise specified.

Specifications in *italic text* are guaranteed by design.

Analog input

Table 1. Analog input specifications

Parameter	Conditions	Specification
A/D converter type		Successive approximation type
Input voltage range for linear operation, single-ended mode	CHx to GND	±10 volts (V) max
Input common-mode voltage range for linear operation, differential mode	CHx to GND	−10 V min, +20 V max
<i>Absolute maximum input voltage</i>	<i>CHx to GND</i>	<i>±28 V max</i>
<i>Input impedance</i>		<i>122K Ohms</i>
Input current (Note 1)	V _{in} = +10 V	70 microamperes (μA) typ
	V _{in} = 0 V	−12 μA typ
	V _{in} = −10 V	−94 μA typ
Number of channels		8 single-ended / 4 differential, software selectable
Input ranges, single-ended mode		▪ ±10 V, G=2
Input ranges, differential mode		▪ ±20 V, G=1
		▪ ±10 V, G=2
		▪ ±5 V, G=4
		▪ ±4 V, G=5
		▪ ±2.5 V, G=8
		▪ ±2.0 V, G=10
		▪ ±1.25 V, G=16
		▪ ±1.0 V, G=20
		Software selectable
Throughput (Note 2)	Software paced	250 samples per second (S/s) typ, PC-dependent
	Continuous scan	48 kilosamples per second (kS/s)
Channel gain queue	Up to 16 elements	Software configurable channel, range, and gain.
Resolution (Note 3)	Differential	14-bits, no missing codes
	Single-ended	13-bits
Integral linearity error		±2 least significant bit (LSB) typ
Differential linearity error		±0.5 LSB typ
Absolute accuracy long term drift (Note 4)	±20V range	±3LSB typ. (delta t = 1000 hrs)
	±4V range	±6LSB typ. (delta t = 1000 hrs)
	±1V range	±8LSB typ. (delta t = 1000 hrs)
2.5VREF accuracy (pin 16)		±36.25 mV max.
2.5VREF output current (pin 16)	Source	5 mA max.
	Sink	20 μA min, 100 μA typ
Trigger source	Software selectable	External digital: TRIG_IN

Note 1: Input current is a function of applied voltage on the analog input channels. For a given input voltage, V_{in}, the input leakage is approximately equal to (8.181*V_{in}−12) μA.

Note 2: Maximum throughput scanning to PC memory is machine dependent. The rates specified are for Windows XP only. Maximum rates on operating systems that predate XP may be less and must be determined through testing on your machine

Note 3: The ADS7871 converter only returns 13-bits (0 to 8192 codes) in single-ended mode.

Note 4: Extrapolating the long term drift accuracy specifications will provide the approximate long term drift of the RedLab 1408FS intermediate input ranges.

Table 2. Accuracy, differential mode

Range	Absolute Accuracy 25°C (±mV)	Absolute Accuracy 0 to 50°C (±mV)
±20 V	10.98	49.08
±10 V	7.32	33.42
±5 V	3.66	20.76
±4 V	2.92	19.02
±2.5 V	1.83	14.97
±2 V	1.70	14.29
±1.25 V	1.21	12.18
±1 V	1.09	11.63

Table 3. Accuracy, single-ended mode

Range	Absolute Accuracy 25°C (±mV)	Absolute Accuracy 0 to 50°C (±mV)
±10 V	10.98	49.08

Table 4. Noise performance, differential mode

Range	Typical counts	Least significant bit _{root mean square} (LSB _{rms})
±20 V	8	1.21
±10 V	8	1.21
±5 V	9	1.36
±4 V	10	1.51
±2.5 V	12	1.81
±2 V	14	2.12
±1.25 V	18	2.72
±1 V	22	3.33

Table 5. Noise performance, single-ended mode

Range	Typical Counts	LSB _{rms}
±10 V	8.0	1.21

Analog output

Table 6. Analog output specifications

Parameter	Conditions	Specification
Resolution		12-bits, 1 in 4096
Output range		0 to 4.096 V, 1 mV per LSB.
Number of channels		2
Throughput (Note 5)	Software paced	250 S/s single channel typical, PC dependent
	Single channel, continuous scan	10 kS/s
	Dual channel, continuous scan, simultaneous update	5 kS/s
Power on and reset voltage		0V, ±20 mV typ. (initializes to 000h code)
Output drive	Each D/A OUT	±15 mA

Slew rate	0.8 V/microsecond (μ s) typ
-----------	----------------------------------

Note 5: Maximum throughput scanning from PC memory is machine dependent. The rates specified are for Windows XP only. Maximum rates on operating systems that predate XP may be less and must be determined through testing on your machine.

Table 7. Analog output accuracy

Range	Accuracy (\pm LSB)
0 to 4.096 V	4.0 typ, 45.0 max

Table 8. Analog output accuracy components

Range	% of FSR (\pm)	Gain Error at FS (\pm mV)	Offset (\pm mV) (Note 6)	Accuracy at FS (\pm mV)
0 to 4.096 V	0.1 typ, 0.9 max	4.0 typ, 36.0 max	1.0 typ, 9.0 max	4.0 typ, 45.0 max

Note 6: Zero-scale offsets may result in a fixed zero-scale error producing a "dead-band" digital input code region.. In this case, changes in digital input code at values less than 0x040 may not produce a corresponding change in the output voltage. The RedLab 1408FS offset error is tested and specified at code 0x040.

Digital input/output

Table 9. Digital I/O specifications

Digital type	CMOS
Number of I/O	16 (Port A0 through A7, Port B0 through B7)
Configuration	2 banks of 8
Pull-up/pull-down configuration	All pins pulled up to V_s via 47 K resistors (default). Positions available for pull-down to ground. Hardware selectable via zero ohm (Ω) resistors as a factory option.
Input high voltage	2.0 V min, 5.5 V absolute max
Input low voltage	0.8 V max, -0.5 V absolute min
Output high voltage ($I_{OH} = -2.5$ mA)	3.8 V min
Output low voltage ($I_{OL} = 2.5$ mA)	0.7 V max
Power on and reset state	Input

External trigger

Table 10. Digital trigger specifications

Parameter	Conditions	Specification
Trigger source (Note 7)	External digital	TRIG_IN
Trigger mode	Software selectable	Edge sensitive: user configurable for CMOS compatible rising or falling edge.
Trigger latency		10 μ s max
Trigger pulse width		1 μ s min
Input high voltage		4.0 V min, 5.5 V absolute max
Input low voltage		1.0 V max, -0.5 V absolute min
Input leakage current		± 1.0 μ A

Note 7: TRIG_IN is a Schmitt trigger input protected with a 1.5 kilohm ($k\Omega$) series resistor.

External clock input/output

Table 11. External clock I/O specifications

Parameter	Conditions	Specification
Pin name		SYNC
Pin type		Bidirectional
Software selectable direction	Output (default)	Outputs internal A/D pacer clock.
	Input	Receives A/D pacer clock from external source.
Input clock rate		48 KHz, maximum
Clock pulse width	Input mode	1 μ s min
	Output mode	5 μ s min
<i>Input leakage current</i>	<i>Input mode</i>	$\pm 1.0 \mu A$
Input high voltage		4.0 V min, 5.5 V absolute max
Input low voltage		1.0 V max, -0.5 V absolute min
Output high voltage (Note 8)	IOH = -2.5 mA	3.3 V min
	No load	3.8 V min
Output low voltage (Note 8)	IOL = 2.5 mA	1.1 V max
	No load	0.6 V max

Note 8: SYNC is a Schmitt trigger input and is over-current protected with a 200 Ω series resistor.

Counter section

Table 12. Counter specifications

Pin name (Note 9)	CTR
Counter type	Event counter
Number of channels	1
Input type	TTL, rising edge triggered
<i>Input source</i>	<i>CTR screw terminal</i>
Resolution	32 bits
<i>Schmidt trigger hysteresis</i>	<i>20 mV to 100 mV</i>
<i>Input leakage current</i>	$\pm 1 \mu A$
Maximum input frequency	1 MHz
<i>High pulse width</i>	<i>500 ns min</i>
<i>Low pulse width</i>	<i>500 ns min</i>
Input high voltage	4.0 V min, 5.5 V absolute max
Input low voltage	1.0 V max, -0.5 V absolute min

Note 9: CTR is a Schmitt trigger input protected with a 1.5K Ω series resistor.

Non-volatile memory

Table 13. Non-volatile memory specifications

EEPROM	1,024 bytes		
EEPROM Configuration	Address Range	Access	Description
	0x000-0x07F	Reserved	128 bytes system data
	0x080-0x1FF	Read/write	384 bytes cal data
	0x200-0x3FF	Read/write	512 bytes user area

Microcontroller

Table 14. Microcontroller specifications

Type	High performance 8-bit RISC microcontroller
Program memory	16,384 words
Data memory	2,048 bytes

Power

Table 15. Power specifications

Parameter	Conditions	Specification
Supply current (Note 10)		80 mA
+5V USB power available (Note 11)	Connected to self-powered hub	4.5 V min, 5.25 V max
	Connected to externally-powered root port hub	
	Connected to bus-powered hub	4.1 V min, 5.25 V max
Output current (Note 12)	Connected to self-powered hub	420 mA max
	Connected to externally-powered root port hub	
	Connected to bus-powered hub	20 mA max

Note 10: This is the total current requirement for the RedLab 1408FS which includes up to 10 mA for the status LED.

Note 11: *Self-powered hub* refers to a USB hub with an external power supply. Self-powered hubs allow a connected USB device to draw up to 500 mA.

Root port hubs reside in the PC's USB host controller. The USB port(s) on your PC are root port hubs. All externally powered root port hubs (desktop PCs) provide up to 500 mA of current for a USB device. Battery-powered root port hubs provide 100 mA or 500 mA, depending upon the manufacturer. A laptop PC that is not connected to an external power adapter is an example of a battery-powered root port hub.

Bus powered hubs receive power from a self-powered or root port hub. In this case the maximum current available from the USB +5 V is 100 mA. The minimum USB +5 V voltage level can be as low as 4.1 V.

Note 12: Output current refers to the total amount of current that can be sourced from the USB +5 V, analog outputs and digital outputs.

General

Table 16. General specifications

Parameter	Conditions	Specification
Device type		USB 2.0 full speed
Device compatibility		USB 1.1, USB 2.0

Environmental

Table 17. Environmental specifications

Operating temperature range	0 to 70 °C
Storage temperature range	−40 to 70 °C
Humidity	0 to 90% non-condensing

Mechanical

Table 18. Mechanical specifications

Dimensions	79 millimeters (mm) long x 82 mm wide x 25 mm high
USB cable length	3 meters max
User connection length	3 meters max

Main connector and pin out

Table 19. Main connector specifications

Connector type	Screw terminal
Wire gauge range	16 AWG to 30 AWG

4-channel differential mode

Pin	Signal Name	Pin	Signal Name
1	CH0 IN HI	21	Port A0
2	CH0 IN LO	22	Port A1
3	AGND	23	Port A2
4	CH1 IN HI	24	Port A3
5	CH1 IN LO	25	Port A4
6	AGND	26	Port A5
7	CH2 IN HI	27	Port A6
8	CH2 IN LO	28	Port A7
9	AGND	29	GND
10	CH3 IN HI	30	PC+5V
11	CH3 IN LO	31	GND
12	AGND	32	Port B0
13	D/A OUT 0	33	Port B1
14	D/A OUT 1	34	Port B2
15	AGND	35	Port B3
16	+2.5VREF	36	Port B4
17	GND	37	Port B5
18	TRIG IN	38	Port B6
19	SYNC	39	Port B7
20	CTR	40	GND

8-channel single-ended mode

Pin	Signal Name	Pin	Signal Name
1	CH0 IN	21	Port A0
2	CH1 IN	22	Port A1
3	AGND	23	Port A2
4	CH2 IN	24	Port A3
5	CH3 IN	25	Port A4
6	AGND	26	Port A5
7	CH4 IN	27	Port A6
8	CH5 IN	28	Port A7
9	AGND	29	GND
10	CH6 IN	30	PC+5V
11	CH7 IN	31	GND
12	AGND	32	Port B0
13	D/A OUT 0	33	Port B1
14	D/A OUT 1	34	Port B2
15	AGND	35	Port B3
16	+2.5VREF	36	Port B4
17	GND	37	Port B5
18	TRIG IN	38	Port B6
19	SYNC	39	Port B7
20	CTR	40	GND

Meilhaus Electronic GmbH
Am Sonnenlicht 2
D-82239 Alling, Germany
Phone: +49 (0)8141 - 5271-0
Fax: +49 (0)8141 - 5271-129
E-Mail: sales@meilhaus.com
<http://www.meilhaus.com>