

Multifunction DAQ Devices

User's Guide

Document Revision 1ÈÒ April 2011 © Copyright 2011



Table of Contents

Table of Contents Preface 4	2
About this User's Guide	4
What you will learn from this user's guide	4
Conventions in this user's guide	
Where to find more information	
Introducing the RedLab 2408-2AO	
Overview: RedLab 2408-2AO features	5
RedLab 2408-2AO block diagram	6
Installing a RedLab 2408-2ĂO	7
What comes with your shipment?	
Hardware	
Documentation	
Unpacking	
Installing the software Universal Library and InstaCal	
Installing the hardware	
Calibrating	
Self-calibration	
Factory calibration	8
Functional Details	9
External components	
USB connector LEDs	
Screw terminals	
Signal connections	
Input isolation	
Analog/TC input	
Analog input mode Gain queue	
TC input mode	
Analog output	
Digital I/O Internal pull-up/pull-down capability	
External pull-up/pull-down capability	
Counter input	
Ground	
Mechanical drawings	
•	
Analog input	
Channel configurations	
Accuracy	
Thermocouple measurement accuracy	
Analog input DC voltage measurement accuracy	22
Input bandwidth	
Noise performance Channel switching error	
Throughput rate	
Analog voltage output	
Analog input/output calibration	
rmaiog mput output canoration	

Digital input/output	26
Counter	28
Memory	28
Microcontroller	28
Power	29
USB specifications	29
Environmental	29
Mechanical	29
Screw terminal connector type and pinout	29
Screw terminal pinout	30

About this User's Guide

What you will learn from this user's guide

This user's guide describes the RedLab 2408-2AO data acquisition device and lists device specifications.

Conventions in this user's guide

For more information about					
Text present reading.	Text presented in a box signifies additional information and helpful hints related to the subject matter you are reading.				
Caution!	Caution! Shaded caution statements present information to help you avoid injuring yourself and others, damaging your hardware, or losing your data.				
bold text	Bold text is used for the names of objects on a screen, such as buttons, text boxes, and check boxes.				
<i>italic</i> text	Italic text is used for the names of manuals and help topic titles, and to emphasize a word or phrase.				

Where to find more information

- The *Quick Start Guide* is available on your RedLab CD in the root directory.
- The *Guide to Signal Connections* is available on your RedLab CD under "ICalUL\Documents".
- The Universal Library User's Guide is available on your RedLab CD under "ICalUL\Documents".
- The Universal Library Function Reference is available on your RedLab CD under "ICalUL\Documents".
- The Universal Library for LabVIEWTM User's Guide is available on your RedLab CD under "ICalUL\Documents".

If your RedLab 2408-2AO is damaged, notify Meilhaus Electronic immediately by phone, fax, or email.

- Phone: +49 (0) 8363/7493/3: :
- Fax: +49 (0) 8363/7493/38;
- E-Mail: support@meilhaus.com

Introducing the RedLab 2408-2AO

Overview: RedLab 2408-2AO features

The RedLab 2408-2AO is a USB 2.0 full-speed device that is supported under the following operating systems:

Microsoft Windows 7/Vista/XP (32-bit or 64-bit)

The RedLab 2408-2AO provides the following features:

- 16 single-ended or eight differential 24-bit analog inputs with sampling rates up to 1 kS/s. Each channel is software-configurable as single-ended or differential. For each differential channel pair, you lose one single-ended channel.
- Analog input ranges of ±10 V, ±5 V, ±2.5 V, ±1.25 V, ±0.625 V, ±0.312 V, ±0.156 V, and ±0.078 V.
- Up to eight analog inputs can be configured as differential thermocouple (TC) inputs, which include builtin cold-junction compensation and open TC detection.
- Two 16-bit analog output channels. You can pace a single channel at rates of up to 1 kS/s. You can pace both channels simultaneously at rates of up to 500 S/s.
- Computer protection provided through a minimum of 500 VDC input isolation between field wiring and the USB interface.
- Eight lines of digital I/O and two 32-bit counters.
- Screw terminals for field wiring connections

RedLab 2408-2AO block diagram

RedLab 2408-2AO functions are illustrated in the block diagram shown here.

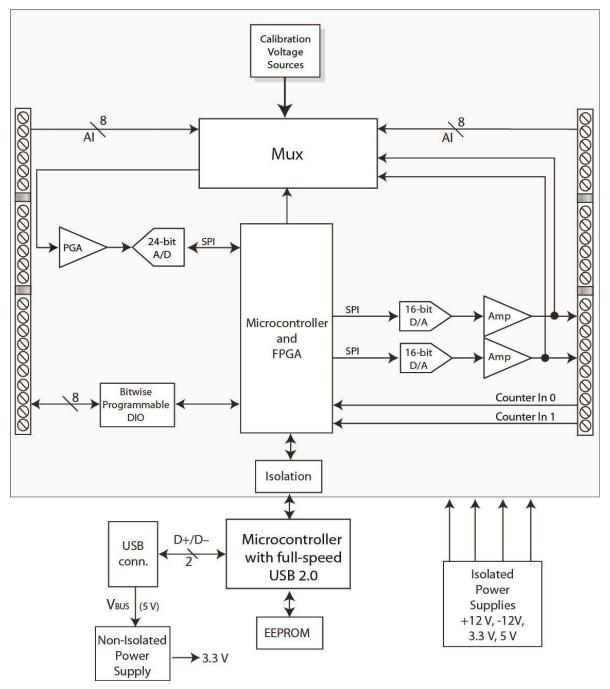


Figure 1. RedLab 2408-2AO functional block diagram

Installing a RedLab 2408-2AO

What comes with your shipment?

As you unpack your RedLab 2408-2AO, verify that the following components are included.

Hardware

RedLab 2408-2AO device



• USB cable (2-meter length)

Documentation

In addition to this hardware user's guide, a *Quick Start Guide* booklet in PDF format is included with the CD. This booklet provides an overview of the MCC DAQ software you received with the device, and includes information about installing the software. Please read this booklet completely before installing any software or hardware.

Unpacking

As with any electronic device, take care while handling to avoid damage from static electricity. Before removing the RedLab 2408-2AO from its packaging, ground yourself using a wrist strap or by simply touching the computer chassis or other grounded object to eliminate any stored static charge.

If your RedLab 2408-2AO is damaged, notify Meilhaus Electronic immediately by phone, fax, or email.

- Phone: +49 (0) 8363/7493/3: :
- Fax: +49 (0) 8363/7493/38;
- E-Mail: <u>support@meilhaus.com</u>

Installing the software

Note: Before installing a RedLab 2408-2AO, you must install the software you plan to use with the device.

Universal Library and InstaCal

Install Universal Library and InstaCal when you want to develop data acquisition applications using Windows programming languages.

Universal Library and InstaCal software are included on the CD that ships with the device. Refer to the *Quick Start Guide* booklet for instructions about installing Universal Library and InstaCal software.

Installing the hardware

Install the software before you install your device

A driver needed to run the RedLab 2408-2AO is installed when you install the software. Therefore, you need to install the software package you plan to use before you install the hardware.

For operation on a Windows operating system, we recommend that you run Windows Update to update your operating system with the latest USB drivers.

To connect a RedLab 2408-2AO to your system, turn on your computer and connect the USB cable to an available USB port on the computer or to an external USB hub connected to the computer. Connect the other end of the USB cable to the USB connector on the device. No external power is required.

When you connect the device for the first time to a computer running Windows, a **Found New Hardware** dialog opens when the operating system detects the device. The dialog closes after the device is installed.

A green **Status** LED indicates the device status. When the LED is on, the device is powered and ready for operation. If the LED is not on, the device is not powered or did not initialize. Figure 2 Seite 9 shows the location of the **STATUS** LED.

Caution! Do not disconnect **any** device from the USB bus while the computer is communicating with the RedLab 2408-2AO, or you may lose data and/or your ability to communicate with the device.

If the Status LED turns off

If the **Status** LED turns on but then turns off, the computer has lost communication with the RedLab 2408-2AO. To restore communication, disconnect the USB cable from the computer and then reconnect it. This should restore communication, and the **Status** LED should turn on.

Calibrating

Self-calibration

The RedLab 2408-2AO supports self-calibration. You should calibrate the device whenever the ambient temperature changes by more than ± 10 °C from the last self-calibration. Use InstaCal utility to calibrate the device.

Factory calibration

Return the device to Meilhaus Electronic when calibration is required. The normal calibration interval is once per year.

Chapter 3

Functional Details

External components

The RedLab 2408-2AO has the following external components:

- USB connector
- LEDs
- Screw terminals

Figure 2 shows the location of each component.

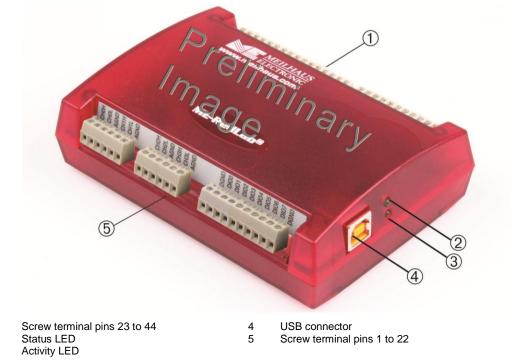


Figure 2. RedLab 2408-2AO device external components

USB connector

The USB connector provides +5 V power and communication. No external power supply is required.

LEDs

1 2

3

The RedLab 2408-2AO has two LEDs – **STATUS** and **ACTIVITY**.

- The **Status** LED is lit when the device is detected and installed on the computer.
- The Activity LED indicates the communication status of a device. This LED blinks when data is transferred, and is off when the device is not communicating.

Screw terminals

The RedLab 2408-2AO has two banks of screw terminals. Screw terminal functions for differential and singleended modes are identified in Figure 3 and Figure 4. The RedLab 2408-2AO screw terminals provide the following connections:

- 16 single-ended (CH0 to CH15 see Figure 3) or eight differential (CH0H/CH0L to CH7H/CH7L) analog input connections
- Eight digital I/O connections (DI00 to DI07)

- Two analog output connections (AOUT0, AOUT1)
- Two counter inputs (**CTR0**, **CTR1**)
- One power output (**+5V**)
- 10 analog grounds (AGND), four digital grounds (DGND), and one chassis ground (CHAS)

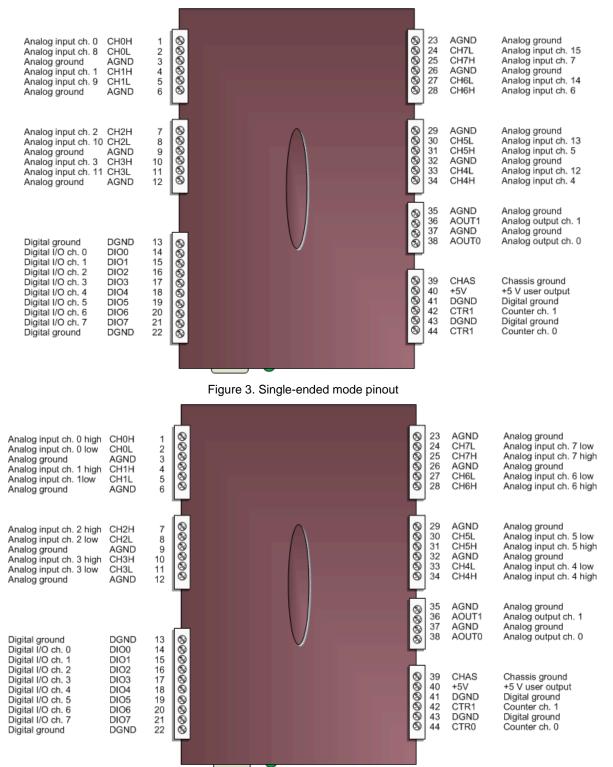


Figure 4. Differential mode pinout

Signal connections

Input isolation

The RedLab 2408-2AO is an isolated data acquisition device. The analog I/O, digital I/O, counters, and all the digital control/timing are referenced to an isolated ground as shown in the figure below. This ground is physically and electrically separate from the ground used by the circuit connected to the system bus interface.

Isolation provides a barrier between the host computer and potentially hazardous voltages by physically and electrically separating two parts of the measurement device.

- The *non-isolated* ground is common to the chassis ground of the computer, while the "isolated" ground is not.
- All analog measurements are made relative to the isolated ground. See Figure 5 for details.

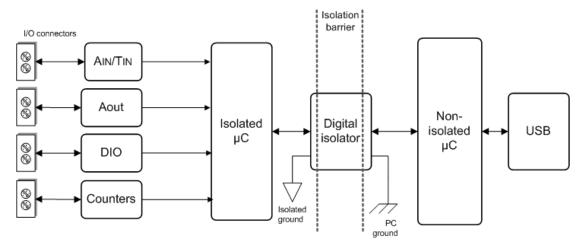


Figure 5. RedLab 2408-2AO input isolation diagram

When making measurements in industrial environments, DAQ devices can encounter hazardous voltages, transients, large common mode voltages and fluctuating ground potentials. Any one of these issues can seriously degrade the measurement accuracy of the device and possibly damage the measurement instrument. To overcome these issues, some DAQ devices provide physical and electrical isolation. Some of the benefits of isolation include:

- Safety: A DAQ device employing physical and electrical isolation helps to keep high voltages and transients from damaging the system-side host computer.
- Ground loops: Improper grounding of the signal source that the DAQ device is measuring is one of the
 most common sources of noise and measurement inaccuracies. Isolation improves the measurement
 accuracy by physically preventing ground loops. Ground loops a common source of noise and error are
 the results of a measurement system having multiple grounds at different potentials.
- Common mode rejection: With isolation, a DAQ device can measure small signals in the presence of large common mode voltages. Isolation increases the ability of the measurement system to reject common mode voltages. The common mode voltage is the signal that is common to both the positive and negative inputs of the measurement device, but is not part of the signal to measure.

Analog/TC input

Each analog input channel has the following measurement parameters:

- Voltage input range
- TC type J, K, T, E, R, S, B, or N

You can select a unique input range or signal type for each channel. For example, one channel could be used for volts and another for temperature.

Analog input mode

You can configure the analog inputs for single-ended or differential mode. The input voltage range is software selectable for ± 10 V, ± 5 V, ± 2.5 V, ± 1.25 V, ± 0.625 V, ± 0.312 V, ± 0.156 V, or ± 0.078 V.

With single-ended mode, connect up to 16 inputs to screw terminals **CH0** to **CH15**. single-ended mode requires two wires:

- Connect one wire to the signal you want to measure (**CHx**).
- Connect one wire to the analog ground reference (**AGND**).

Refer to Figure 3 Seite 10 for the location of the single-ended inputs.

With differential mode, connect up to eight differential inputs to screw terminals **CH0H/CH0L** to **CH7H/CH7L**. differential mode requires two wires plus a ground reference:

- Connect one wire to the high/positive signal (**CHxH**).
- Connect one wire to the low/negative signal (CHxL).
- Connect one wire to the analog ground reference (**AGND**).

Refer to Figure 4 Seite 10 for the location of the differential inputs.

When connecting differential voltage inputs to a "floating" voltage source, make sure there is a DC return path from each voltage input to ground. You make this path by connecting a resistor from each low channel input to an AGND pin. A value of approximately 100 k Ω can be used for most applications. This does not apply to channels configured for TC input, as they have their own internal reference.

Leave unused input channels either floating or tied to an AGND terminal.

Source impedances should be kept as small as possible to avoid settling time and accuracy errors.

Figure 6 shows a differential voltage connection using a ground path resistor.

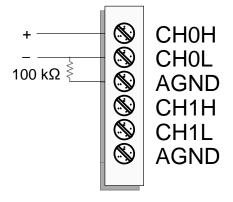


Figure 6. Differential voltage connection with ground path resistor example

Gain queue

Use the RedLab 2408-2AO channel - gain queue feature to configure a list of channels, modes, and gains for each scan. The settings are stored in a channel – gain queue list that is written to local memory on the device.

The channel - gain queue list contains one or more channel numbers and range settings. You can configure up to 64 elements. The channels can be listed in any order, and can include duplicate channels for sampling at different ranges.

An example of a 12-element lis	t is shown in the table below.
--------------------------------	--------------------------------

Element	Channel	Range	
0	CH0	BIP10V	
1	CH1	BIP5V	
2	CH0	BIP2Pt5VOLTS	
3	CH4	BIP2Pt5VOLTS	
4	CH8	BIP2Pt5VOLTS	
5	CH0	BIP5V	
6	CH1 BIP1Pt25V		
7	CH7	BIP5V	
8	CH0	BIP1Pt25VOLTS	
9	CH15	BIP10V	
10	10 CH9 BIP1Pt25		
11	CH10	BIP2Pt5VOLTS	

Sample channel gain queue list

Carefully match the gain to the expected voltage range on the associated channel or an over range condition may occur. Although this condition does not damage the device, it does produce a useless full-scale reading, and can introduce a long recovery time due to saturation of the input channel.

For more information on analog signal connections

For more information on analog inputs, refer to the *Guide to Signal Connections* (this document is available on your RedLab CD under "ICalUL\Documents".)

TC input mode

You can make up to eight high-resolution differential TC measurements with a RedLab 2408-2AO. Built-in cold-junction compensation sensors are provided for each of the screw-terminal blocks and any supported TC type can be attached to any of the 8 TC channels.

Do not connect TCs as *single-ended* – doing so can cause false readings.

You do not need to use ground-referencing resistors for TC inputs because the analog front-end circuit levelshifts the TC output into the common-mode input range of the A/D.

The RedLab 2408-2AO also provides an open TC detection feature for each of the analog input channels configured for TC measurement. This feature is enabled or disabled by software, and when enabled, it detects if an open-circuit condition exists at the TC sensor.

The RedLab 2408-2AO provides electrostatic discharge (ESD) protection for each of the TC inputs. However, before handling TC sensors, follow standard ESD practices and discharge any accumulated ESD charge.

Once the TC sensor is connected to the device, the configuration options have been selected, and the recommended 45 minute warm up has elapsed, the device is ready to make high-resolution differential temperature measurements.

Built-in cold junction compensation (CJC) automatically compensates for the additional thermal EMFs generated by connecting the TC leads to the RedLab 2408-2AO terminal blocks.

CJC is performed using a high-resolution temperature sensor connected close to the device terminal blocks. The device includes two separate CJC sensors – one on each side of the PCB. Software corrects for the additional TCs created at the terminals.

Once the A/D and CJC data is collected, the application software uses this data to linearize to an accurate temperature reading. The TC linearization uses the latest NIST linearization coefficients for each of the eight TC types supported by the RedLab 2408-2AO.

When configuring TC sensors, keep any stray capacitance as small as possible relative to AGND to avoid settling time and accuracy errors. For TC channels, do not provide a return path to ground. This is done internally.

Figure 7 shows a typical TC connection.

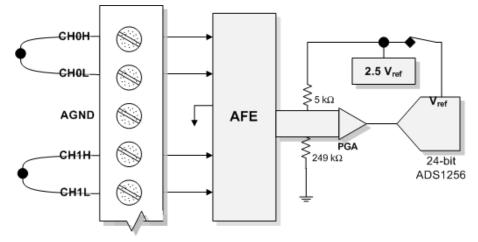


Figure 7. Differential TC connection example

Noise filtering, data rate and throughput rate

Although the RedLab 2408-2AO A/D converter has a maximum data rate of 3,750 samples per second, the actual throughput rate you observe for voltage and temperature data is determined by these formulas.

• Maximum single-channel throughput:

$$\frac{\frac{1}{\frac{1}{\frac{data rate}{data rate}}} + 640 \mu s}$$

Maximum multiple-channel throughput:

$$\overline{\sum_{n} \left(\frac{1}{data \, rate} + \, 640 \mu s \right)}$$

where n is the number of channels

See Table 18 and Table 19 in the "Specifications" chapter for details.

This drop-off in throughput rate is due to the noise filtering feature in the device. You can control the amount of the noise filtering by adjusting the data rate setting. By reducing the data rate, the averaging of samples increases, and noise drops correspondingly.

Figure 8 illustrates this inverse relationship. This graph applies to the A/D converter only – do not expect this level of performance from a RedLab 2408-2AO itself.

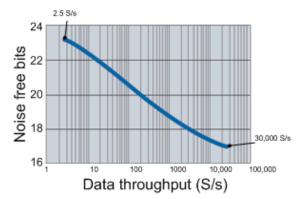


Figure 8. RedLab 2408-2AO A/D converter data rate vs. noise graph

If low noise is your main concern, you can operate the RedLab 2408-2AO at very low data rates starting from 2.5 samples per second (S/s). At low rates, much of the noise is averaged out of the data, and issues such as reference noise become less important.

At higher data rates, higher-frequency noise sources are not averaged out and begin to be troublesome. These noise sources include the noise inherent in the A/D converter itself, which is not reducible.

Since TCs can pick up noise in your environment, select a data rate based on the primary noise frequency. For example, to reduce the effect of 60 Hz noise, select a data rate of 60 (or a supported submultiple of 60, such as 10 or 5).

Multiple-channel throughput rates

When setting different sample rates for channels, be aware that all the channels will be sampled within the same *sample window* based on the channel with the lowest sample rate.

For example, if you set a 10 Hz data rate for channel 0, and a 50 Hz data rate for channel 1, basically, both channels pass the same number of samples per second to the host computer. However, more averaging is performed on channel 0 samples; therefore, channel 0 is sampled at a higher resolution.

The RedLab 2408-2AO A/D converter performs averaging, and the number of averages equals 30,000/data rate.

In this example, channel 0 is sampled 3000 times over 100 ms, and all samples are averaged into one sample. Then, channel 1 is sampled 600 times over 20 ms, and samples are likewise averaged into one sample.

The final samples are available to you at a maximum rate of about 8 Hz (8.245 Hz).

 


Figure 9. RedLab 2408-2AO data rate vs. resolution example

Analog output

The RedLab 2408-2AO has two 16-bit analog outputs (**AOUT0** and **AOUT1**). Both outputs can be updated simultaneously at a rate of 500 S/s per channel. One output can be updated at a rate of 1000 S/s. The output range is fixed at ± 10 V. The outputs default to 0 V when the host computer is shut down or suspended, or when a reset command is issued to the device.


Digital I/O

You can connect up to eight digital I/O lines to **DIOO** through **DIO7**. The digital I/O terminals can detect the state of any TTL-level input.

Digital input voltage ranges of up to 0 to +15 V are permitted, with thresholds of 0.6 V (low) and 2.2 V (high).

Each DIO channel is an *open-drain*, which, when used as an output, is capable of sinking up to 150 mA for direct drive applications.

Figure 10 shows an example of a typical DIO connection.

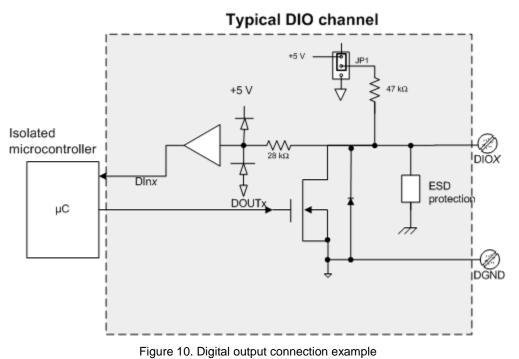

The figure represents connections for one channel. The other seven channels are connected in the same manner.

The maximum sink current is 150 mA per 8-channel bank, or if all eight channels are used, 18 mA (maximum) per channel.

Internal pull-up/pull-down capability

Unconnected inputs are pulled low by default to 0 V through 47 k Ω resistors via jumper **J6** on the circuit board. The pull-up/pull-down voltage is common to all 47 k Ω resistors. Complete the following steps to configure these inputs to pull high (+5V).

Caution! The discharge of static electricity can damage some electronic components. Before removing the RedLab 2408-2AO from its housing, ground yourself using a wrist strap or touch the computer chassis or other grounded object to eliminate any stored static charge.

To open the case and set jumper **J6**, do the following.

- 1. Turn the device over and rest the top of the housing on a flat, stable surface.
- 2. Peel off the four rubber feet on the bottom of the device to access the screws.
- **3.** Remove the four screws from the bottom of the device.
- 4. Hold both the top and bottom sections together, turn the device over and rest it on the surface, then carefully remove the top section of the case to expose the circuit board.

5. Configure jumper J6 for either pull-up, pins 1-2, or pull-down, pins 2-3. The jumper is configured by default for pull-up. Figure 11 shows the location of the jumper on the board.

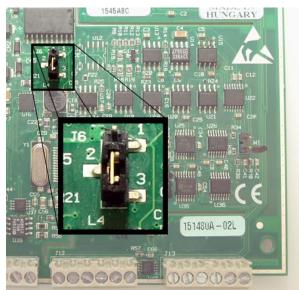


Figure 11. Location of J6 jumper

Figure 12 shows the jumper configured for pull-up and pull-down.

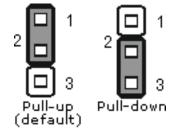


Figure 12. J6 jumper configurations

6. Replace the top section of the case, and fasten it to the bottom section with the four screws. Replace the rubber feet.

For more information on digital signal connections

For general information about digital signal connections and digital I/O techniques, refer to the *Guide to Signal Connections* (this document is available on your RedLab CD under "ICalUL\Documents".)

The pull-up/pull-down voltage is common to all of the internal 47 k Ω resistors.

External pull-up/pull-down capability

You can also place an external pull-up resistor on any of the DIO bits, which enables you to pull the DIO bit up to a voltage that exceeds the internal +5 V pull-up voltage.

When using external pull-up resistors, be aware of the following:

- You should either remove the J6 jumper, or store it by attaching it to one of the three pins.
- When using external pull-up resistors, be aware that the internal resistors cause a slight voltage impedance shift to digital lines in the "on" state as various lines change between the on/off states.

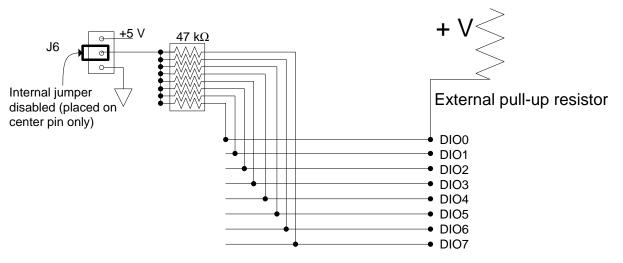


Figure 13. Digital I/O external resistor configuration

Counter input

The **CTR0** and **CTR1** terminals are 32-bit event counters that can accept frequency inputs up to 1 MHz. The internal counter increments when the TTL levels transition from low to high.

Ground

The analog ground (**AGND**) terminals provide a common ground for all analog channels.

The digital ground (**GND**) terminals provide a common ground for the digital and counter channels and the power terminal.

Mechanical drawings

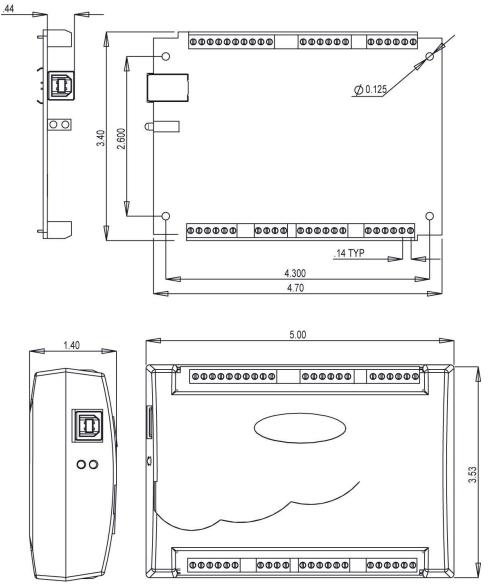


Figure 14. RedLab 2408-2AO circuit board (top) and enclosure dimensions

Specifications

All specifications are subject to change without notice.

Typical for 25 °C unless otherwise specified.

All specifications apply to all temperature and voltage input channels unless otherwise specified. Specifications in *italic* text are guaranteed by design.

Analog input

Parameter	Conditions	Specification	
A/D converter type		ADS1256, 24-bit Sigma Delta	
A/D data rates		3750 S/s, 2000 S/s, 1000 S/s, 500 S/s, 100 S/s, 60 S/s, 50 S/s, 25 S/s, 10 S/s, 5 S/s, 2.5 S/s	
Throughput		 Single channel: 2.5 S/s to 1102.94 S/s (software-selectable) Multiple channels: 0.16 S/s to 551.47 S/s (software-selectable) See Table 11 and Table 12 for details. 	
Number of channels		16 single-ended or 8 differential (software-selectable). Thermocouples require differential mode. For each channel configured as differential, you essentially lose two single-ended channels.	
Input isolation		500 VDC min between field wiring and USB interface	
Channel configurations		Temperature sensor input, software-selectable to match sensor type	
		Voltage input	
Input voltage range	Thermocouple mode	±0.078125 V	
	Voltage mode (Note 1)	±10 V, ±5 V, ±2.5 V, ±1.25 V, ±0.625 V, ±0.3125 V, ±0.15625 V, ±0.078125 V (software-selectable)	
Absolute maximum input voltage	<i>CxH-CxL relative to</i> <i>GND</i>	 ±22 V max (power on) ±10 V max (power off) 	
Input impedance		 10 MΩ (power on) 390 Ω (power off) 	
Input leakage current		±20 nA	
	Input voltage >±30 V (power on/off)	$\pm 1 \ \mu A \ max$	
Input capacitance		590 pf	
Maximum working voltage (signal + common mode)	Voltage mode	±10.25 V max	
Common mode rejection ratio (Note 1)	Thermocouple mode, $(f_{\rm IN} = 60 \ Hz)$	110 dB	
	Voltage mode, $(f_{IN} = 60 \text{ Hz}, \text{ all input} \text{ ranges})$	90 dB	
ADC resolution		24 bits	
Crosstalk	Adj chan, differential mode	100 dB	
Input coupling		DC	
Channel gain queue	Up to 64 elements	Software-selectable channel and range	
Warm-up time		45 minutes min	
Open thermocouple detect		Software-selectable for each channel.	

Parameter	Conditions	Specification
CJC sensor accuracy	15 °C to 35 °C	$\pm 0.5 \ ^{\circ}C \ typ$
	0 °C to 55 °C	±1.0 °C max

Note 1: Placing a notch of the A/D digital filter at 60 Hz (setting A/D data rate = 60 S/s, 10 S/s, 5 S/s or 2.5 S/s) further improves the common mode rejection of this frequency.

Channel configurations

When any item is changed, the firmware stores channel configurations in the EEPROM of the isolated microcontroller. An external application issues commands over the USB to make changes, and the configuration is made non-volatile through the use of the EEPROM.

When connecting differential voltage inputs to a floating voltage source, provide a DC return path from each voltage input to ground. To do this, connect a resistor from each input to an AGND pin. A value of approximately 100 k Ω can be used for most applications. Leave unused input channels either floating or tied to AGND. For each voltage/thermocouple channel configured as differential, you essentially lose one single-ended channel.

Keep source impedances as small as possible to avoid settling time and accuracy errors.

Channel	Category	Specification
CxH/CxL	Thermocouple	8 differential channels
CxH/CxL	Voltage	16 individually-configurable channels that can be configured as either single-ended or
CxH/CxL	Voltage	8 differential.

Table 2. Channel configurations

Compatible sensors

Table 2	Compatible sensor type	enocificatione
Table 3.	Compatible sensor type :	specifications

Parameter	Conditions
Thermocouple	J: -210 °C to 1200 °C
	K: –270 °C to 1372 °C
	R: –50 °C to 1768 °C
	S: -50 °C to 1768 °C
	T: -270 °C to 400 °C
	N: -270 °C to 1300 °C
	E: –270 °C to 1000 °C
	B: 0 °C to 1820 °C

Accuracy

Thermocouple measurement accuracy

Thermocouple measurement accuracy specifications include polynomial linearization error, cold-junction compensation measurement error, and are for sample rates up to 60S/s. These specs are for one year, or 3000 operating hours, whichever comes first.

There is a CJC sensor for each terminal block of the module. The accuracy listed below assumes the screw terminals are at the same temperature as the CJC sensor.

The accuracy errors shown do not include the inherent accuracy error of the thermocouple sensor itself. Contact your thermocouple supplier for details on the actual thermocouple sensor accuracy limitations.

Connect thermocouples to the RedLab 2408-2AO such that they are floating with respect to AGND.

When configuring thermocouple sensors, keep any stray capacitance relative to AGND as small as possible to avoid settling time and accuracy errors.

The AGND and DGND pins are isolated from earth ground. You can connect thermocouple sensors to voltages referenced to earth ground as long as isolation between the AGND/DGND pins and earth ground is maintained.

Thermocouple	Sensor temperature range	Accuracy error, maximum	Accuracy error, typical	Tempco (°C/°C)	
т	−210 °C	2.572 °C	1.416 °C		
J	0 °C	0.935 °C	0.469 °C	0.022	
	1200 °C	1.869 °C	1.456 °C		
T.	−210 °C	2.917 °C	1.699 °C		
K	0 °C	1.017 °C	0.526 °C	0.029	
	1372 °C	2.478 °C	2.022 °C		
	−200 °C	3.480°C	2.030 °C		
Ν	0 °C	1.201 °C	0.659 °C	0.029	
	1300 °C	1.991 °C	1.600 °C		
	−50 °C	4.826 °C	3.133 °C		
R	250 °C	2.117 °C	1.424 °C	0.082	
	1768 °C	2.842 °C	2.347 °C		
	−50 °C	4.510 °C	2.930 °Co	.089	
S	250 °C	2.165 °C	1.468 °C		
	1768 °C	3.187 °C	2.597 °C		
	250 °C	5.489 °C	3.956 °C		
В	700 °C	2.283 °C	1.743 °C	0.14	
	1820 °C	2.202 °C	1.842 °C		
Е	−200 °C	2.413 °C	1.352 °C	0.017	
	0 °C	1.069 °C	0.551 °C		
	1000 °C	1.575 °C	1.211 °C		
	−200 °C	2.821 °C	1.676 °C		
Т	0 °C	1.050 °C	0.558 °C	0.027	
	400 °C	0.957 °C	0.595 °C	1	

Table 4. Thermocouple accuracy specifications, including CJC measurement error.
All specifications are (±).

To achieve the thermocouple accuracies listed above, warm up the RedLab 2408-2AO for 45 minutes after the initial power on. The accuracies listed above are only guaranteed if the device is housed in the plastic enclosure.

Analog input DC voltage measurement accuracy

Table 5. DC Accuracy components and specifications. All values are (\pm)

Range	Gain error (% of reading)	Offset error	INL error (% of range)	Absolute accuracy	Gain temperature coefficient (% reading/°C)	Offset temperature coefficient (μV/°C)
±10 V	0.0037	50 µV	0.0008	500 µV	0.0006	3
±5 V	0.0047	25 µV	0.0008	300 µV	0.0006	2
±2.5 V	0.0059	20 µV	0.0008	200 µV	0.0006	1
±1.25 V	0.0056	20 µV	0.0008	100 µV	0.0006	1
±0.625 V	0.0068	15 µV	0.0005	60 µV	0.0006	1
±0.3125 V	0.0104	15 µV	0.0006	50 µV	0.0006	1
±0.15625 V	0.0184	10 µV	0.0005	40 µV	0.0006	1
±0.078125 V	0.0384	10 µV	0.0009	40 µV	0.0006	1

Input bandwidth

Table 6. input bandwidth

A/D data rate	-3 db Bandwidth (Hz)
3750 S/s	1615
2000 S/s	878
1000 S/s	441
500 S/s	221
100 S/s	44.2
60 S/s	26.5
50 S/s	22.1
25 S/s	11.1
10 S/s	4.42
5 S/s	2.21
2.5 S/s	1.1

Noise performance

For the peak-to-peak noise distribution test, a differential input channel is connected to AGND at the input terminal block, and 50,000 samples are acquired at the maximum rate available at each setting.

	1										
		A/D data rate									
Range	3750 S/s	2000 S/s	1000 S/s	500 S/s	100 S/s	60 S/s	50 S/s	25 S/s	10 S/s	5 S/s	2.5 S/s
±10 V	126.84	100.14	71.76	45.06	30.52	30.52	26.70	19.07	11.92	9.54	9.54
±5 V	56.74	47.56	34.21	25.87	16.21	14.31	14.31	14.30	5.96	4.77	4.77
±2.5 V	32.96	28.79	17.94	14.19	7.51	7.09	7.09	5.72	3.81	4.00	4.00
±1.25 V	18.57	17.52	13.83	9.30	5.48	5.48	5.01	3.81	3.34	3.34	2.86
±0.625 V	18.88	16.58	8.45	7.41	5.32	4.80	4.38	3.86	2.50	2.61	1.98
±0.3125 V	15.33	14.76	8.19	6.94	4.75	4.69	4.49	3.70	3.34	2.56	2.45
±0.15625 V	13.28	16.84	7.47	6.61	5.70	4.48	4.48	4.24	2.66	3.07	2.29
±0.078125 V	13.47	15.02	9.17	6.88	4.28	4.16	4.00	3.57	2.28	2.13	2.40

Table 7. Peak-to-peak noise performance specifications (μV)

Table 8. RMS noise performance specifications (µVRMS)

		A/D data rate									
Range	3750 S/s	2000 S/s	1000 S/s	500 S/s	100 S/s	60 S/s	50 S/s	25 S/s	10 S/s	5 S/s	2.5 S/s
±10 V	19.22	15.17	10.87	6.83	4.62	4.62	4.05	2.89	1.81	1.44	1.44
±5 V	8.60	7.21	5.18	3.92	2.46	2.17	2.17	2.16	0.90	0.72	0.72
±2.5 V	4.99	4.36	2.72	2.15	1.14	1.07	1.07	0.87	0.58	0.60	0.60
±1.25 V	2.81	2.66	2.10	1.41	0.83	0.83	0.76	0.58	0.51	0.51	0.43
±0.625 V	2.86	2.51	1.28	1.12	0.81	0.73	0.66	0.58	0.38	0.40	0.30
±0.3125 V	2.32	2.24	1.24	1.05	0.72	0.71	0.68	0.56	0.51	0.39	0.37
±0.15625 V	2.01	2.55	1.13	1.00	0.86	0.68	0.68	0.64	0.40	0.47	0.35
±0.078125 V	2.04	2.28	1.39	1.04	0.65	0.63	0.60	0.54	0.35	0.32	0.36

Table 9. Noise-free resolution specifications (bits)

		A/D data rate									
Range	3750 S/s	2000 S/s	1000 S/s	500 S/s	100 S/s	60 S/s	50 S/s	25 S/s	10 S/s	5 S/s	2.5 S/s
±10 V	17.2	17.6	18.1	18.7	19.3	19.3	19.5	20.0	20.6	21.0	21.0
±5 V	17.4	17.6	18.1	18.5	19.2	19.4	19.4	19.4	20.6	21.0	21.0
±2.5 V	17.2	17.4	18.1	18.4	19.3	19.4	19.4	19.7	20.3	20.7	21.0
±1.25 V	17.0	17.1	17.4	18.0	18.8	18.8	18.9	19.3	19.5	19.5	19.7
±0.625 V	16.0	16.2	17.1	17.3	17.8	18.0	18.1	18.3	18.9	18.8	19.2
±0.3125 V	15.3	15.3	16.2	16.4	17.0	17.0	17.0	17.3	17.5	17.9	17.9
±0.15625 V	14.5	14.1	15.3	15.5	15.7	16.1	16.1	16.1	16.8	16.9	17.1
±0.078125 V	14.5	14.3	15.0	15.4	16.1	16.2	16.2	16.4	17.0	17.1	16.9

Channel switching error

		Accuracy									
Range	3750 S/s	2000 S/s	1000 S/s	500 S/s	100 S/s	60 S/s	50 S/s	25 S/s	10 S/s	5 S/s	2.5 S/s
±10 V	0.0010%	0.0008%	0.0005%	0.0004%	0.0002%	0.0002%	0.0003%	0.0002%	0.0001%	0.0001%	0.0001%
±5 V	0.0009%	0.0008%	0.0004%	0.0004%	0.0003%	0.0002%	0.0002%	0.0002%	0.0001%	0.0001%	0.0001%
±2.5 V	0.0010%	0.0007%	0.0008%	0.0004%	0.0003%	0.0002%	0.0002%	0.0002%	0.0002%	0.0001%	0.0001%
±1.25 V	0.0013%	0.0009%	0.0008%	0.0007%	0.0004%	0.0004%	0.0003%	0.0003%	0.0003%	0.0003%	0.0003%
±0.625 V	0.0022%	0.0016%	0.0011%	0.0011%	0.0007%	0.0007%	0.0005%	0.0005%	0.0004%	0.0005%	0.0003%
±0.3125 V	0.0031%	0.0031%	0.0020%	0.0017%	0.0015%	0.0012%	0.0010%	0.0010%	0.0012%	0.0009%	0.0009%
±0.15625 V	0.0056%	0.0062%	0.0048%	0.0037%	0.0032%	0.0025%	0.0024%	0.0021%	0.0019%	0.0022%	0.0016%
±0.078125 V	0.0114%	0.0123%	0.0076%	0.0070%	0.0041%	0.0051%	0.0046%	0.0036%	0.0032%	0.0030%	0.0034%

Channel switching error is defined as the accuracy that can be expected after one conversion when switching from a channel with a DC input at one extreme of full scale to another channel with a DC input at the other extreme of full scale, expressed in terms of percentage of full scale value.

Throughput rate

The single channel throughput rate is calculated using this formula:

Table 11. Single channel throughput rate specifications

A/D data rate	Maximum throughput (Hz)
3750 S/s	1102.94
2000 S/s	877.19
1000 S/s	609.76
500 S/s	378.79
100 S/s	93.98
60 S/s	57.78
50 S/s	48.45
25 S/s	24.61
10 S/s	9.94
5 S/s	4.98
2.5 S/s	2.50

The multiple-channel throughput rate is calculated using this formula:

Maximum throughput =
$$\frac{1}{\sum_{n} \left(\frac{1}{data \ rate} + 640 \ \mu s\right)}$$
, where *n* is the number of channels

Number of input channels	3750 S/s	2000 S/s	1000 S/s	500 S/s	100 S/s	60 S/s	50 S/s	25 S/s	10 S/s	5 S/s	2.5 S/s
1	1102.94	877.19	609.76	378.79	93.98	57.78	48.45	24.61	9.94	4.98	2.50
2	551.47	438.60	304.88	189.39	46.99	28.89	24.22	12.30	4.97	2.49	1.25
3	367.65	292.40	203.25	126.26	31.33	19.26	16.15	8.20	3.31	1.66	0.83
4	275.74	219.30	152.44	94.70	23.50	14.45	12.11	6.15	2.48	1.25	0.62
5	220.59	175.44	121.95	75.76	18.80	11.56	9.69	4.92	1.99	1.00	0.50
6	183.82	146.20	101.63	63.13	15.66	9.63	8.07	4.10	1.66	0.83	0.42
7	157.56	125.31	87.11	54.11	13.43	8.25	6.92	3.52	1.42	0.71	0.36
8	137.87	109.65	76.22	47.35	11.75	7.22	6.06	3.08	1.24	0.62	0.31
9	122.55	97.47	67.75	42.09	10.44	6.42	5.38	2.73	1.10	0.55	0.28
10	110.29	87.72	60.98	37.88	9.40	5.78	4.84	2.46	0.99	0.50	0.25
11	100.27	79.74	55.43	34.44	8.54	5.25	4.40	2.24	0.90	0.45	0.23
12	91.91	73.10	50.81	31.57	7.83	4.82	4.04	2.05	0.83	0.42	0.21
13	84.84	67.48	46.90	29.14	7.23	4.44	3.73	1.89	0.76	0.38	0.19
14	78.78	62.66	43.55	27.06	6.71	4.13	3.46	1.76	0.71	0.36	0.18
15	73.53	58.48	40.65	25.25	6.27	3.85	3.23	1.64	0.66	0.33	0.17
16	68.93	54.82	38.11	23.67	5.87	3.61	3.03	1.54	0.62	0.31	0.16

Table 12. Multiple-channel throughput rate specifications (Hz)

Analog voltage output

Unused AOUTx output channels should be left disconnected.

The RedLab 2408-2AO output voltage level defaults to 0 V whenever the host PC is reset, shut down or suspended, or if a reset command is issued to the device.

The outputs may have a transient during startup. The duration of the output transient depends highly on the enumeration process of the host PC. Typically, the output of the RedLab 2408-2AO is stable after two seconds.

Table 13. RedLab 2408-2AO analog voltage output specifications

Parameter	Conditions	Specifications		
Digital-to-analog converter		DAC8552		
Number of channels		2		
Resolution		16 bits		
Output ranges	Calibrated	±10 V		
	Uncalibrated	±10.05 V (software-selectable)		
Output transient	Host PC is reset, powered on, suspended or a reset command is issued to device	Duration: 2 s Amplitude: 2 V p-p		
	Initial power on	Duration: 50 ms Amplitude: 5 V peak		
Differential non-linearity		±0.25 LSB typ ±1 LSB max		
Output current	AOUTx pins	±5.0 mA max		
Output short-circuit protection	AOUTx connected to AGND	Unlimited duration		

Parameter	Conditions	Specifications
Output coupling		DC
Power on and reset state		DACs cleared to zero-scale: 0 V, ±50 mV
Output noise		60 µV _{rms} (BW=1.5 KHz)
Settling time	To rated accuracy, 10 V step	75 μS
Slew rate		1.0 V/µs
Throughput	Single-channel	1000 S/s max, system-dependent, 0.01 S/s min
	Multichannel	1000 S/s / #ch max, system- dependent, 0.01 S/s min

Table 14. Calibrated absolute accuracy specifications

Range Ac	accuracy (±LSB)
±10 V 16.	6.0

Table 15. Calibrated absolute accuracy components specifications

Range	% of reading	Offset (±mV)	Temp drift (%/°C)	Absolute accuracy at FS (±mV)
±10 V	±0.0183	1.831	0.00055	3.661

Table 16. Relative accuracy specifications

Range	Relative accuracy (±LSB)
±10 V	4.0 typ

Analog input/output calibration

Table 17. Analog input/output calibration specifications

Parameter	Specifications	
Recommended warm-up time	45 minutes min	
Calibration	Firmware calibration	
Calibration interval	1 year	
AI calibration reference	+10.000 V, ±5 mV max. Actual measured values stored in EEPROM	
	Tempco: 5 ppm/°C max	
	Long term stability: 30 ppm/1000 hours	
AO calibration procedure	The analog output pin is internally routed to the analog input pin.	
AOUTx readback	Each AOUT <i>x</i> output can be independently measured by the onboard A/D converter.	
	Software-selectable	

Digital input/output

Table 18. Digital input specifications

Parameter	Specifications
Number of I/O	8 channels
Configuration	Each DIO bit can be independently read from (DIN) or written to (DOUT). The DIN bits can be read at any time whether the DOUT is active or tri-stated.
Input voltage range	0 to +15 V
Input type	CMOS (Schmitt trigger)

Specifications

Parameter	Specifications
Input characteristics	47 kΩ pull-up/pull-down resistor, 28 kΩ series resistor
Maximum input voltage range	0 V to +20 V max (power on/off, relative to DGND) (Note 2)
Pull-up/pull-down configuration	All pins pulled up to +5 V via individual 47 k Ω resistors (the J6 shorting block default position is pins 1 and 2). Pull down capability is available by placing the J6 shorting block across pins 2 and 3.
Transfer rate (software paced)	500 port reads or single bit reads per second typ.
Input high voltage	1.3 V min, 2.2 V max
Input low voltage	1.5 V max, 0.6 V min
Schmitt trigger hysteresis	0.4 V min, 1.2 V max

Note 2: DGND pins are recommended for use with digital input and digital output pins. The DGND and AGND pins are common and are isolated from earth ground.

Parameter	Specifications	
Number of I/O	8 channels	
Configuration (Note3)	Each DIO bit can be independently read from (DIN) or written to (DOUT). The DIN bits may be read at any time whether the DOUT is active or tri-stated	
Output characteristics (Note 4)	47 kΩ pull-up, open drain (DMOS transistor)	
Pull-up configuration	All pins pulled up to +5 V via individual 47 k Ω resistors (the J6 shorting block default position is pins 1 and 2).	
Transfer rate (software paced)	Digital output – 500 port writes or single-bit writes per second typ.	
Output voltage range	0 V to +5 V (no external pull up resistor, internal 47 k Ω pull-up resistors connected to +5 V by default)	
	0 V to +15 V max (Note 5)	
Drain to source breakdown voltage	+50 V min	
Off state leakage current (Note 6)	1.0 µA	
Sink current capability	 150 mA max (continuous) per output pin 	
	 150 mA max (continuous) for all eight channels 	
DMOS transistor on-resistance (drain to source)	4 Ω	

Table 19. Digital output specifications

Note 3: DGND pins are recommended for use with digital input and digital output pins. The DGND and AGND pins are common and are isolated from earth ground.

Note 4: Each DMOS transistor source pin is internally connected to DGND.

- **Note 5:** The external pull-up is connected to the digital output bit through an external pull-up resistor. Adding an external pull-up resistor connects it in parallel with the internal 47 k Ω pull-up resistor of that particular digital input/output bit. Careful consideration should be made when considering the external pull-up resistor value and the resultant pull-up voltage produced at the load.
- **Note 6:** Does not include the additional leakage current contribution that may occur when using an external pull-up resistor.

Counter

Parameter	Conditions	Specification
Pin name		CTR0, CTR1
Number of channels		2 channels
Resolution		32-bits
Counter type		Event counter
Input type		Schmitt trigger, rising edge triggered
Input source		CTR0 (pin 44) CTR1 (pin 42)
Counter read/writes rates	Counter read	System dependent, 500 reads per second.
(software paced)	Counter write	System dependent, 500 writes per second.
Input characteristics	Each CTRx input pin	562 k Ω pull-up resistor to +5 V, 10 k Ω series resistor
Input voltage range		±15 V max
Max input voltage range	CTR0, CTR1 relative to AGND and DGND (Note 7)	±20 V max (power on/off)
Input high voltage		1.3 V min, 2.2 V max
Input low voltage		1.5 V max, 0.6 V min
Schmitt trigger hysteresis		0.4 V min, 1.2 V max
Input bandwidth (-3 dB)		1 MHz
Input capacitance		25 pf
Input leakage current		±120 nA@5 V, ±1.6 mA@±15 V
Input frequency		1 MHz, max
High pulse width		500 ns, min
Low pulse width		500 ns, min

Table 20. CTR specifications

Note 7: DGND pins are recommended for use with counter input pins. The DGND and AGND are common and are isolated from earth ground.

Memory

Table 21. Memory specifications

EEPROM	4096 bytes isolated micro reserved for sensor configuration
	256 bytes USB micro for external application use

Microcontroller

Table 22. Microcontroller specifications

Туре	One high-performance 8-bit RISC microcontroller with USB interface (non-isolated)
	One high-performance 16-bit RISC microcontroller for measurements (isolated)

Power

Parameter	Conditions	Specification
Supply current (Note 8)	Quiescent current	275 mA
Voltage supervisor limits	$4.5 \text{ V} > \text{V}_{\text{ext}} \text{ or } \text{V}_{\text{ext}} > 5.5 \text{ V}$	PWR LED = Off; (power fault)
	$4.5 \text{ V} < \text{V}_{\text{ext}} < 5.5 \text{ V}$	PWR LED = On
+5 V user output voltage range	Available at terminal block pin 40	4.75 V min to 5.25 V max
+5 V user output current	Available at terminal block pin 40	10 mA max
Isolation	Measurement system to PC	500 VDC min

Table 23. Power specifications

Note 8: This is the total quiescent current requirement for the RedLab 2408-2AO which includes up to 10 mA for the status LED. This does not include any potential loading of the digital I/O bits, +5 V user terminal or the AOUTx outputs.

USB specifications

Table 24. USB specifications

Parameter	Specifications
USB device type	USB 2.0 (full-speed)
Device compatibility	USB 1.1, USB 2.0
USB cable type	A-B cable, UL type AWM 2527 or equivalent. (min 24 AWG VBUS/GND, min 28 AWG D+/D-)
USB cable length	3 meters max

Environmental

Table 25. Environmental specifications

Parameter	Specifications
Operating temperature range	0 °C to 50 °C max
Storage temperature range	-40 °C to 85 °C max
Humidity	0 to 90% non-condensing max

Mechanical

Table 26. Mechanical specifications

Parameter	Specifications
Dimensions (L x W x H)	127 × 89.9 × 35.6 mm (5.00 x 3.53 x 1.40 in.)
User connection length	3 meters max

Screw terminal connector type and pinout

Table 27. Screw terminal connector specifications

Connector type	Fixed screw terminal
Wire gauge range	16 AWG to 30 AWG

Screw terminal pinout

Pin	Signal name	Pin description	Pin	Signal name	Pin description
1	CH0H	Channel 0 HI	23	AGND	Analog ground
2	CH0L	Channel 0 LO	24	CH7L	Channel 7 LO
3	AGND	Analog ground	25	CH7H	Channel 7 HI
4	CH1H	Channel 1 HI	26	AGND	Analog ground
5	CH1L	Channel 1 LO	27	CH6L	Channel 6 LO
6	AGND	Analog ground	28	CH6H	Channel 6 HI
7	CH2H	Channel 2 HI	29	AGND	Analog ground
8	CH2L	Channel 2 LO	30	CH5L	Channel 5 LO
9	AGND	Analog ground	31	CH5H	Channel 5 HI
10	СНЗН	Channel 3 HI	32	AGND	Analog ground
11	CH3L	Channel 3 LO	33	CH4L	Channel 4 LO
12	AGND	Analog ground	34	CH4H	Channel 4 HI
13	DGND	Digital ground	35	AGND	Analog ground
14	DIO0	Digital input/output	36	AOUT1	Analog output 1
15	DIO1	Digital input/output	37	AGND	Analog ground
16	DIO2	Digital input/output	38	AOUT0	Analog output 0
17	DIO3	Digital input/output	39	CHAS	Chassis ground
18	DIO4	Digital input/output	40	+5V	+5 V output
19	DIO5	Digital input/output	41	DGND	Digital ground
20	DIO6	Digital input/output	42	CTR1	Counter 1
21	DIO7	Digital input/output	43	DGND	Digital ground
22	DGND	Digital ground	44	CTR0	Counter 0

Table 28. 8-channel differential mode pinout

•

Pin	Signal name	Pin description	Pin	Signal name	Pin description
1	CH0	Channel 0	23	AGND	Analog ground
2	CH8	Channel 8	24	CH15	Channel 15
3	AGND	Analog ground	25	CH7	Channel 7
4	CH1	Channel 1	26	AGND	Analog ground
5	CH9	Channel 9	27	CH14	Channel 14
6	AGND	Analog ground	28	CH6	Channel 6
7	CH2	Channel 2	29	AGND	Analog ground
8	CH10	Channel 10	30	CH13	Channel 13
9	AGND	Analog ground	31	CH5	Channel 5
10	CH3	Channel 3	32	AGND	Analog ground
11	CH11	Channel 11	33	CH12	Channel 12
12	AGND	Analog ground	34	CH4	Channel 4
13	DGND	Digital ground	35	AGND	Analog ground
14	DIO0	Digital input/output	36	AOUT1	Analog output 1
15	DIO1	Digital input/output	37	AGND	Analog ground
16	DIO2	Digital input/output	38	AOUT0	Analog output 0
17	DIO3	Digital input/output	39	CHAS	Chassis ground
18	DIO4	Digital input/output	40	+5V	+5 V output
19	DIO5	Digital input/output	41	DGND	Digital ground
20	DIO6	Digital input/output	42	CTR1	Counter 1
21	DIO7	Digital input/output	43	DGND	Digital ground
22	DGND	Digital ground	44	CTR0	Counter 0

Meilhaus Electronic GmbH Am Sonnenlicht 2 D-82239 Alling, Germany Tel.: +49 (0)8141 - 5271-0 Fax: +49 (0)8141 - 5271-129 E-Mail: sales@meilhaus.com http://www.meilhaus.com