

Anleitung für MEphistoScope UM202/UM203

=====

MEphistoScope unter Windows 10/64/Secureboot oder Windows 7/64.

Benötigter Treiber und Software:

ME-iDS 2.1.2 (bitte nur für MEphistoScope verwenden) und
MEphistoLab 2.05.024

Vorgehensweise:

1. ME-iDS installieren.
2. MEphistoLab installieren.
3. MEphistoScope anschließen.
4. MEphistoLab starten.

Für bereits vorhandene, ältere Installationen:

Bitte zuerst FTDI Treiber sowie evtl. vorhandene weitere ältere Software zum MEphistoScope (inkl. abweichender ME-iDS Versionen) komplett deinstallieren.

Dann wie oben unter "Vorgehensweise" beschrieben fortfahren.

Instructions for MEphistoScope UM202/UM203

=====

MEphistoScope with Windows 10/64/Secureboot or Windows 7/64.

Required driver and software:

ME-iDS 2.1.2 (please use only for MEphistoScope) and
MEphistoLab 2.05.024

Procedure:

1. Install ME-iDS.
2. Install MEphistoLab.
3. Connect MEphistoScope.
4. Start MEphistoLab.

For already existing, older installations:

Please uninstall FTDI driver as well as other older MEphistoScope software (incl. other ME-iDS versions) completely first.

Then proceed as described above under "Procedure".

=====

Meilhaus Electronic GmbH
Am Sonnenlicht 2
82239 Alling
www.meilhaus.de